

Installation Instructions

Part Number: 6000149


Product: F ES+, Corvette Z06, GS 2005-2013

Date: 12/9/19



READ THIS BEFORE STARTING

You MUST use the caliper bolts Baer provides with the factory washers!
Failure to do so will result in the factory caliper bolt contacting the rotor hardware!

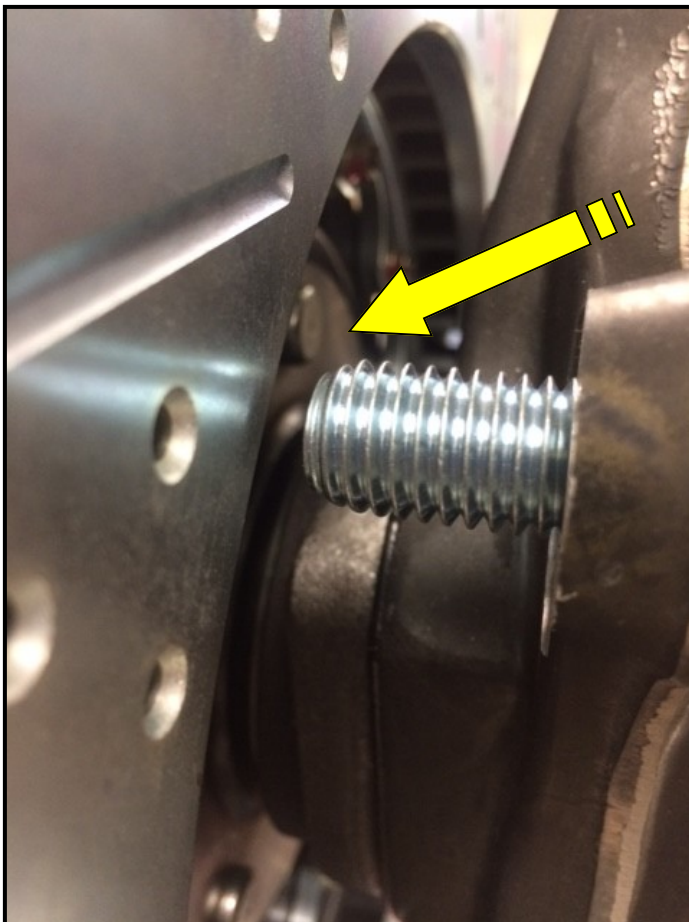

This picture shows the use of the M14x50mm bolts that Baer has supplied you. **You MUST use these bolts with the factory washers** to have adequate clearance between the bolt end and the rotor.