




OMIX-ADA, Inc.

Part # 15210.62
15210.63

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | www.omix-ada.com

Off Road Light Installation Harness

1. Connect +12V OUT wire (red) from relay to positive wire on off road light.
2. Connect supplied ground harness to negative wire on off road light and ground to chassis.
3. Connect SIGNAL wire (blue) from relay to SIGNAL wire from switch (white).
4. Ground relay and on/off switch wires (black) to chassis.
5. Connect +12V IN wire (blue) from relay to +12V power source.
6. Connect +12V IN wire (red) from on/off switch to +12V power source.

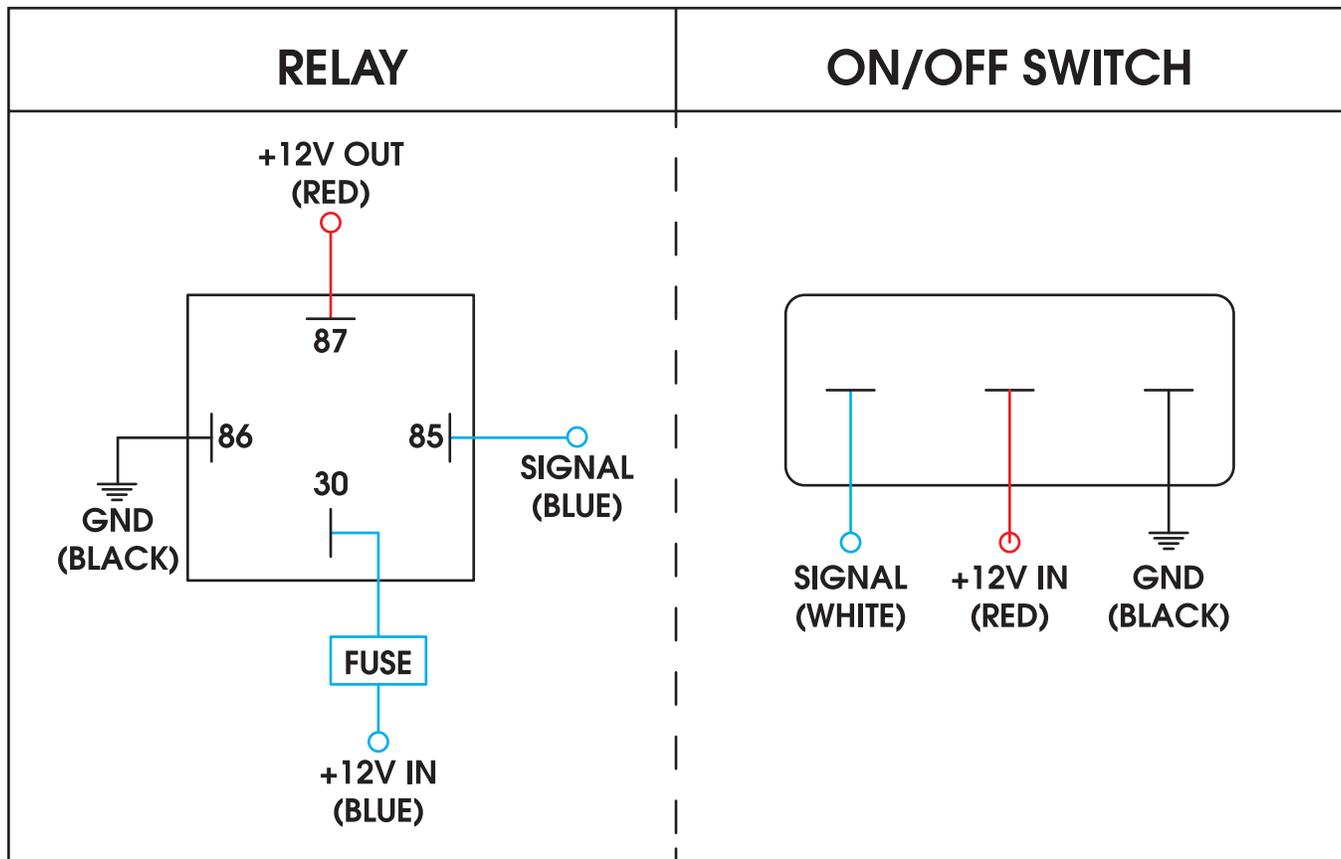

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | TICKET: www.omixsupport.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com