


S5104P

04-05 DODGE RAM 1500, 5.7L HEMI, SINGLE/CREW (SHORT BOX) CAB, CAT BACK, 3" SINGLE SIDE

MBRP
INC.
PERFORMANCE EXHAUST

17 July, 2015

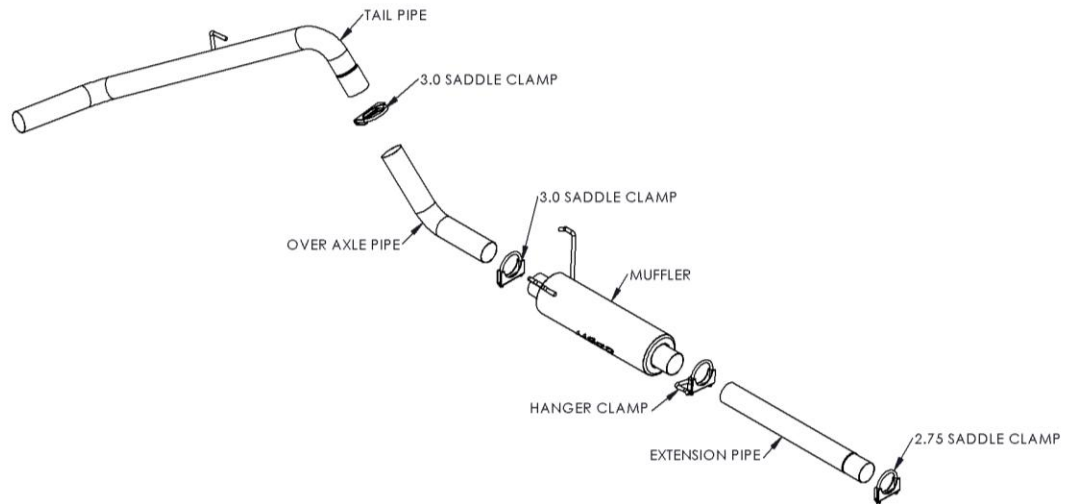

PLEASE READ BEFORE STARTING INSTALLATION

MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged. It is the installer's responsibility to ensure that all components are present and fit together as shown. Please also ensure that all components are undamaged before removal of the factory exhaust. Finally, check that this system properly matches the make and model of the vehicle and will not interfere with previous or planned modifications.

Removal of stock system:

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
2. Remove the clamp located behind the muffler. Remove the tail pipe hanger from the rubber insulator and separate the tail pipe from the muffler at the slip joint. Remove the tail pipe from the vehicle.
3. Remove the clamp in front of the muffler and separate the muffler at the slip joint.
4. Remove the hangers from the rubber insulators and remove the muffler assembly from the vehicle.

Installation of MBRP Inc. Performance Exhaust:

1. **For Regular Cab Models**, temporarily install the **Muffler** by placing the hangers located on the **Muffler** into the factory rubber insulators. Now measure from the front of the **Muffler** to the "Y" pipe. This will give you the required length to cut the **Extension Pipe**. Remove the **muffler** and cut the **Extension Pipe**. **For Crew Cab Models**, skip this step and proceed to **step 2**.
1. Using the **2.5" Clamp**, install the expanded end of the extension pipe over the factory exhaust system behind the "Y" pipe and install the muffler onto the extension pipe with the **3" Hanger Clamp**.
2. Place the hangers located on the **Muffler** into the factory rubber insulators.
3. Using a **3" Clamp**, insert the **Over Axle Pipe** into the **Muffler**.
4. Feed the **Tail Pipe** over the axle and loosely install it into the **Over Axle Pipe** with another **3" Clamp**.
5. Install the tailpipe hanger through the factory rubber insulator.
6. Install the **Hanger Clamp** around the front **Muffler** joint and into the factory rubber insulator located on the frame near the front of the **Muffler**.
7. Align the exhaust as required before tightening **Clamps**.
8. Starting at the front of the exhaust, tighten all **Clamps** and connections.
9. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines, and any wiring. If any interference is detected relocate or adjust.

Congratulations! You are ready to begin enjoying the improved performance and driving experience of your MBRP Inc. Performance Exhaust system. We hope you enjoy your purchase.