

CLEAT HANDLE

UNIVERSAL

RRHG-01



TOOLS REQUIRED

- 13mm Socket

SKILL LEVEL

- Novice
- 1 (you)

Little skill level required, you can easily install it by yourself.

TIME REQUIRED

- .5 Hours

Time to install this should only take about a half hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (4) M8 x 25mm Hex Head Bolts
- (4) M8 Flat Washers
- (4) M8 Split Washers



STEP 1 | The DV8 Cleat can be mounted to any panels with a 1.5" slotted cut out or to a molle panel with a 1" x 1.5" molle cut out.

For this installation guide we will be showing installation on the DV8 Roof Rack and a DV8 interior molle panels.



STEP 2 | **Slot mounting** you will only use the two bolts and handle with the provided bracket.


Using the provided M8 hardware loosely secure the Cleat to the DV8 roof rack by hand.



INSTALLATION MANUAL



STEP 3 | Center the DV8 cleat. Using a 13mm socket secure the two M8 Hex head bolts in place.

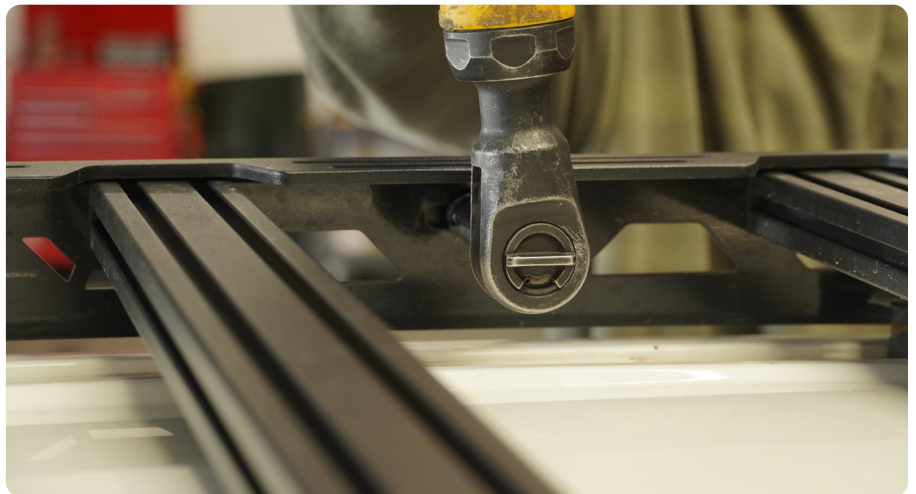

INSTALLATION MANUAL

STEP 4 | Double check that all hardware is secure.



STEP 5 | Molle panel mounting
Place the provided 1" x 1.5" molle Panel backing plate into the panels cut out as shown.



STEP 6 | Thread the provided M8 hardware through the molle panel backing plate. Loosely secure the cleat to the molle panel by hand.



INSTALLATION MANUAL



STEP 7 | Secure the M8 hardware using a 13mm socket or wrench.

Double check that all hardware is secure. Congratulations, installation of the DV8 Cleat is now complete.

