


Guardian Comfort & Guardian Impact Jeep Liner

Congratulations on choosing the finest interior flooring kit available for your Jeep. The Comfort/Impact material is mold and mildew resistant, easily cleaned with water & household cleaning chemicals and extremely resistant to most chemicals.

Kit Contents: Driver side front floor, passenger side front floor, mid section, rear floor (4-door kits only), heat shield material, hook fasteners, and instruction sheet.

Tools needed: Flathead screwdriver, scissors, soap, water, and rubbing alcohol.

NOTE: If you have purchased both a front and a rear kit, it is recommended to install the rear kit first.

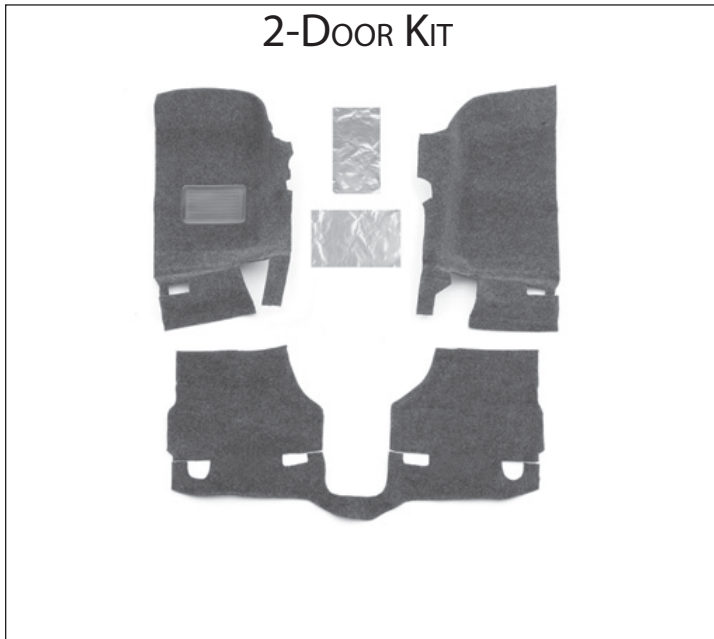

PREPARATION

1. Read all instructions before beginning installation.

2. **WARNING:** The use of front floor mats is not recommended with Comfort or Impact floor kits. If floor mats are used, it is imperative to re-use the removable retention hooks from the factory carpet, installed to the manufacturers specifications.

Do not use floor mats or liners with Ultra Kits, Do not use floor mats or liners with Comfort Kits without retention hooks.

****Please retain these instructions for future reference in your vehicles glove box****

DON'T REMOVE YOUR SEATS!

Our kits and your factory carpet are precut to make removing your seats unnecessary.

3. Remove old Jeep flooring material (if equipped)

4. Wash and dry the floor pan areas thoroughly.

5. Place the hook fasteners on each piece of loop sewn on back side of the Comfort/Impact.

Guardian Comfort & Guardian Impact Jeep Liner

6. Cut the hook fasteners with tape backing to match the length of the loop sewn on the underside of each Premium/ Ultra piece. Pre-install provided heat shields on underside of the two front pieces in areas using the locator marks.

Note: Passenger side heat shield is the larger of the two pieces.

IMPORTANT: Jeep floor should be at least 68°F (20°C) for maximum adhesion. Clean all areas with rubbing alcohol before applying tape. When removing backing, do not touch adhesive.



INSTALLING FRONT FLOOR PIECES

7. Adjust the front seats to the rear most position to allow maximum clearance for installation. Place front floor pieces into place. Tuck under console and around seat brackets as shown.



8. Once properly aligned, pull back part to access the three pieces of hook fastener. Clean surface with alcohol then remove the film backing and roll the part back into place. Firmly press the top surface to ensure adhesive attachment. Repeat for other front floor piece.



Guardian Comfort & Guardian Impact Jeep Liner

INSTALLING MID SECTION

9. Adjust the front seats to the fully forward and tilted up (2-door passenger entry) position. Next place the mid section into place. Position the mid section around seat brackets and tuck under cupholder and console.



10. Once properly aligned, pull back part to access the four pieces of hook fastener. Clean surface with alcohol then remove the film backing and roll the part back into place. Firmly press the top surface to ensure adhesive attachment.

Guardian Comfort & Guardian Impact Jeep Liner

INSTALLING REAR FLOOR (4-DOOR ONLY)

11. Place the rear floor section into place. Tuck the liner around and underneath the front and rear seat brackets.



12. Once properly in place, pull back part to access the four pieces of hook fastener. Clean surface with alcohol then remove the film backing and roll the part back into place. Firmly press the top surface to ensure adhesive attachment.

FITMENT NOTE: The rear floor section is designed to fit on top of the rear wheel well pieces.

CLEANING INFORMATION

The mildew resistant Bed Mat foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your Bed Mat will remain serviceable for as long as you own your truck.

Cleaning your Bed Mat is easy:

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch, etc. Due to the fact that water will not harm the Bed Mat, pressure washing is also an effective way to clean a soiled Bed Mat.
2. Although most acids will not harm the Bed Mat, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your Bed Mat use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The Bed Mat polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

Retain this cleaning information with your vehicle owner's manual for future reference.

Congratulations!

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

www.huskyliners.com

Phone: 800-344-8759

Email: customerservice@huskyliners.com



GUARANTEED...FOR LIFE.