



INSTALLATION GUIDE

PART NUMBER: 5428

FRONT ANTI-SWAY BAR

CHEVROLET ASTRO 2WD | 1985-2002

GMC SAFARI 2WD | 1985-2002

300 W. PONTIAC WAY. CLOVIS, CA 93612
PHONE: 800-445-3767 | EMAIL: INFO@BELLTECH.COM

THANK YOU

Thank you for choosing our high quality Belltech product. We have spent a great deal of time developing our line of products so that you will receive maximum performance with minimal difficulty during installation. Soon your vehicle will be on the road looking and feeling much improved.

Please take a moment to read all instructions and warnings prior to installation of your new Belltech product and before operating your vehicle. If you have any questions or concerns regarding any step in the installation process, please do not hesitate to call or email our customer support specialists who are trained to help you through any portion of this process.

Before You Begin:

It is of the utmost importance that you confirm all the components listed on the parts list are in the kit. You can find this list located on the last page(s) of your instructions. Do not begin installation if any part is missing. Instead, please call our Belltech customer service specialists.

Belltech Customer Support:

Phone: 1-800-445-3767

Email: info@belltech.com

Safety Information:

Warning: Do not work under a vehicle supported only by a jack. Place support stands securely under the vehicle in the manufacturer's specified locations unless otherwise instructed.

Proper use of safety equipment and eye/face/hand protection is necessary when performing any of the following instructions.

We strive for an exceptional experience for all our valued customers. If for any reason you need assistance with your Belltech products, please do not return the product to the store you purchased from, but rather call our dedicated customer service experts, from 7am to 5pm PST.

We recommend that a qualified mechanic, in a properly equipped facility, perform this installation.

It is very helpful to have an assistant available during installation.

Before Driving Your Vehicle:

It is important to double check all brake hoses, cables, and other components to be sure there is no interference. You must also check for wheel/tire to chassis/body interference. If any issues are found, review your installation instructions to be sure no steps were missed, and any problems are corrected.

Make sure your vehicle is aligned immediately following installation.

Check all hardware and torque at intervals for the first 10, 100, and 1000 miles.

Some of Belltech's products are designed to improve your vehicle's off-road performance. Leveling/lifting your vehicle may result in an altered center of gravity. It is crucial to use extreme care when operating your vehicle to prevent rollover and/or loss of control.

Any changes in your vehicle's suspension may result in transformed handleability. Please test-drive your vehicle in a remote location so you can become accustomed to the revised driving characteristics.

Perform headlight check and adjustment.

Failure to drive any modified vehicle in a safe manner may result in harm or death.

Never operate your modified vehicle under the influence of drugs, alcohol, or lack of adequate sleep.

Always wear your seatbelt.



DIFFICULTY:



INSTALLATION TIME: 1 Hour

RECOMMENDED TOOLS:

- Properly rated floor jack
- Support stands
- Wheel chocks
- Metric socket wrench set
- Metric wrench set
- Safety glasses
- Torque wrench rated up to 150 ft lbs.

JACKING, SUPPORTING, AND PREPARING THE VEHICLE

1. Park your vehicle on a smooth, level, concrete, or seasoned asphalt surface.
2. Block the rear wheels of the vehicle using wheel chocks. Make sure the vehicle's transmission is in "PARK" (automatic) or first gear (manual).
3. Activate the parking brake.
4. Loosen, but do not remove, the front wheel lug nuts.
5. Lift the front of the vehicle off the ground using a properly rated floor jack. Lift the vehicle so the front tires are approximately 6-8 inches off the ground.
6. Place support stands rated for the vehicle's weight. The stands must be positioned in the factory specified locations. (Refer to the owner's manual). Prior to lowering the vehicle onto stands, make sure the support stands will contact the chassis. It is very important that the vehicle is properly supported to prevent any harm to oneself or to the vehicle.
7. Lower the vehicle slowly onto the stands.
8. Remove the front wheels.




Technician reminder:


Never work under a vehicle supported only by a jack. It is necessary to place support stands securely under the vehicle in the manufacturer's specified locations unless otherwise instructed.

ORIGINAL SWAY BAR REMOVAL

9. Remove the 15mm end link bolts from below the lower control arms and sway bar. If necessary, hold the 13mm nut with a closed wrench to break loose the hardware. Slide out the end link hardware.

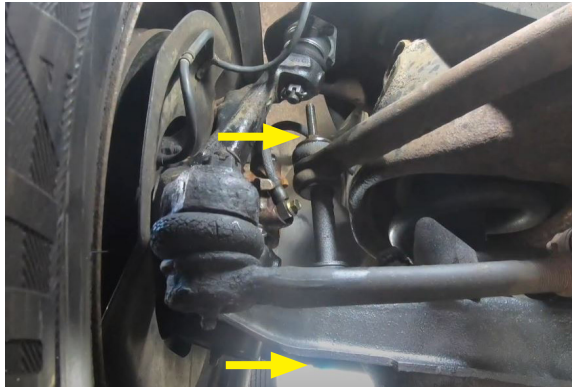

10. Remove the 15mm bolts that hold the two bushing brackets.

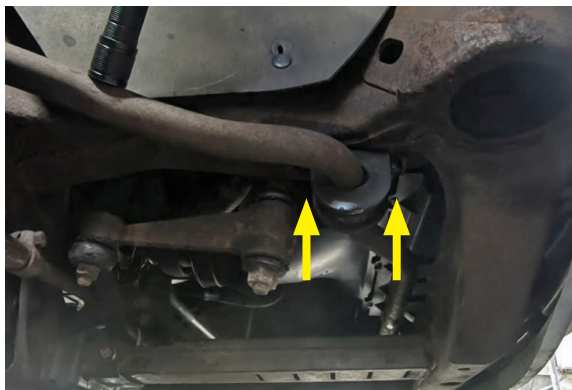


11. Detach the sway bar from the vehicle. If the vehicle is equipped with front bumper supports, guide the sway bar up and over the two supports to the side of the vehicle. Keep the original pivot bushing brackets and bolts to use with the new sway bar.
12. With the sway bar removed, clean the mounting surfaces at the chassis and control arms.

BELLTECH SWAY BAR INSTALLATION

13. Add lubricant to the original pivot bushings. Place the bushings on both sides of the Belltech sway bar, near the position of the original sway bar. Once located, rotate the bushings slightly to evenly spread the lubricant. Place the original bushing brackets over the bushings.



14. Ensure there is $\frac{1}{32}$ " to $\frac{1}{16}$ " of the bushing is showing after the bracket is seated. If the bushing is showing more than $\frac{1}{16}$ ", use a sander or a sheet of coarse grit sandpaper to shave it down to the proper height.

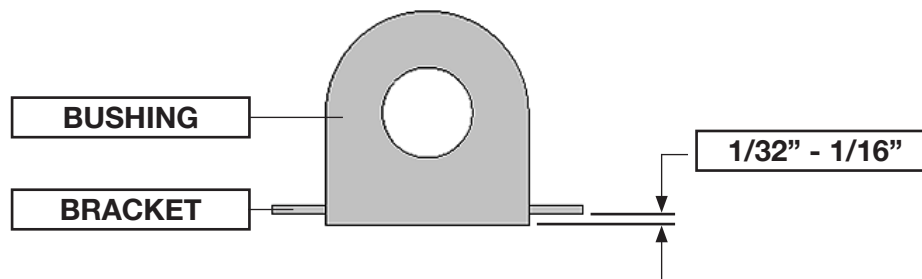


15. Place the Belltech sway bar on the chassis mounts and fasten the original pivot bushing brackets with the original bolts. Do not torque yet. Ensure the arms of the sway bar are resting over the control arms before fastening the hardware.



BELLTECH SWAY BAR INSTALLATION CONTINUED

16. The end links must be assembled through the lower control arms and the ends of the Belltech sway bar as shown in the diagram below.

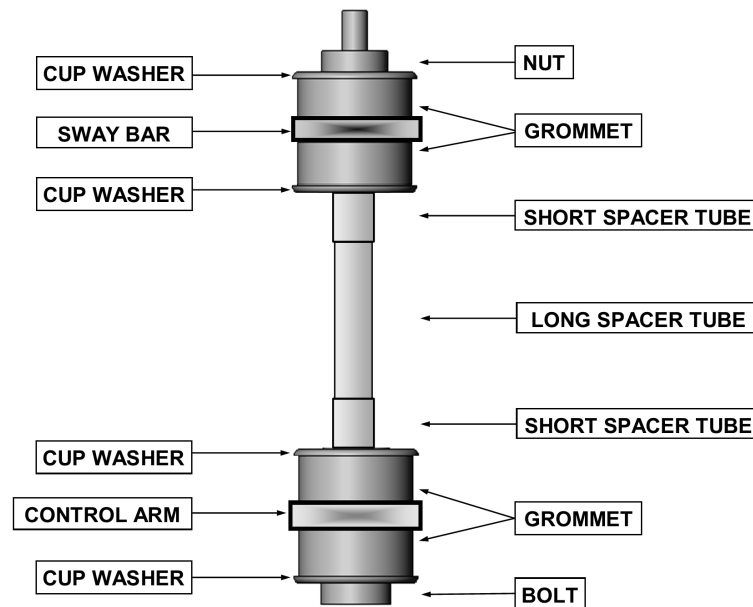

17. Fasten the end link assemblies to the lower control arms and the sway bar. Tighten the end link nuts to the point where the spacer tube can still be forced to rotate on the bolt by hand, but the grommets should not be able to rotate by hand.




18. Torque the four pivot bushing bracket bolts to 27 ft lbs.

FINALIZING THE INSTALLATION

19. Mount the wheels and tighten the lug nuts.
20. Lift the vehicle and remove the support stands.
21. Carefully lower the vehicle onto flat ground.
22. Torque the lug nuts to 140 ft lbs.
23. Check that all components and fasteners have been properly installed and torqued.
24. Read and perform all tasks in the “Before Driving Your Vehicle” section of page 1 of your instructions.

THANK YOU FOR CHOOSING BELLTECH.

You are now a part of the Belltech family and we are eager to catch a glimpse of your newly modified vehicle. Give us a shout out and let us know how much you love our product. Don't forget, we offer other Belltech related merchandise for you and your vehicle on our website www.belltech.com

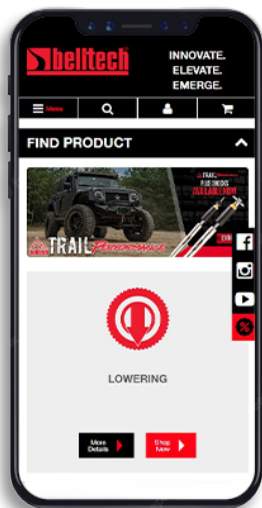

belltechsuspension



Belltech Suspension



@belltechsuspension



@belltechsuspension

If you have any questions, concerns, or warranty related issues regarding your Belltech product, please call or email our experienced customer service specialists.

Belltech Customer Support:

Phone: 1-800-445-3767

Email: info@belltech.com

KIT CONTENTS



SWAY BAR KIT		
Part number	Description	Qty
5428-300	1-3/8" FRONT SWAY BAR	1
5428-777	HARDWARE KIT	1

HARDWARE KIT		
Part number	Description	Qty
110255	3/8"-16 NYLOC NUT	2
112410-95	1.75" SPACER TUBE	2
112502	CUP WASHER	8
113000	END LINK GROMMET	8
112134	3/8"-16 X 6" BOLT	2
113245	1-3/8" PIVOT BUSHING	2
55000-10	WHITE LITHIUM GREASE	1



KW automotive North America, Inc.

300 W. Pontiac Way

Clovis, CA 93612

Phone: +1-559-875-0222

Toll Free: 1-800-445-3767

belltech.com

