



Installation Instructions

D660-0100 & D660-0100-BLK

G87 M2

AXLE BACK EXHAUST SYSTEM

Document Revision: C

Release Date: 06/24/2026

Table of Contents

PARTS LIST	2
REMOVAL OF STOCK SYSTEM	3
VALVE-ACTUATOR INSTALLATION	6
DINAN EXHAUST INSTALLATION.....	8

Thank you for being selective enough to choose a Dinan Performance Exhaust System. The Dinan Engineering Team has spent many hours developing this product to assure that you will receive maximum benefits for a more aggressive sounding system, increased performance, durability and an aesthetic design that you as a customer will be able to enjoy for many years. Ease of installation and maintenance is important to us and has been highly considered throughout the design process.

Prior to performing the installation, familiarize yourself with these instructions as it should help you with the process. If you feel that you do not have the required skills or tools, please arrange for a qualified repair facility to perform the installation.

If you have any difficulties during the installation, or if these instructions are not clear to you, please call Dinan's Technical Support Staff at (800) 341-5480.

Again, thank you for choosing Dinan. Enjoy.

PARTS LIST

Box Contents

Dinan Part Number	Description	QTY
D662-0700	Assy, Rear Muffler	1
D662-0701	Assy, Left Tube	1
D662-0702	Assy, Right Tube	1
D663-0384	Hardware Kit	1
D663-0639 OR D663-0640	Exhaust Tips, Polished OR Exhaust Tips, Black	4 4

Kit Contents


Dinan Part Number	Description	QTY
D671-0377	M6x12 button head	4
D671-0378	M6x16 button head	2
M6 FLAT	M6 flat washer	18
M6 WAVE	M6 wave washer	6
D662-0665	D76 limiter	2
D502121	Tie Strap	4
D662-0677	Extension Harness	2
D662-9249	3" Band Clamp	4
D662-9228	2.75" Accuseal Coupler	2
D662-9242	3" Torca Clamp	2
D661-0031	Spring	2
D661-0032	Heat Shield	2
D662-0433	Valve Mount	2
D671-0189	M6 Locknut	6
D671-0193	M6x20 Socket Head	6

REMOVAL OF STOCK SYSTEM



STEP 1:


Unplug the connector from the valve motor on both the passenger and driver side of the stock exhaust

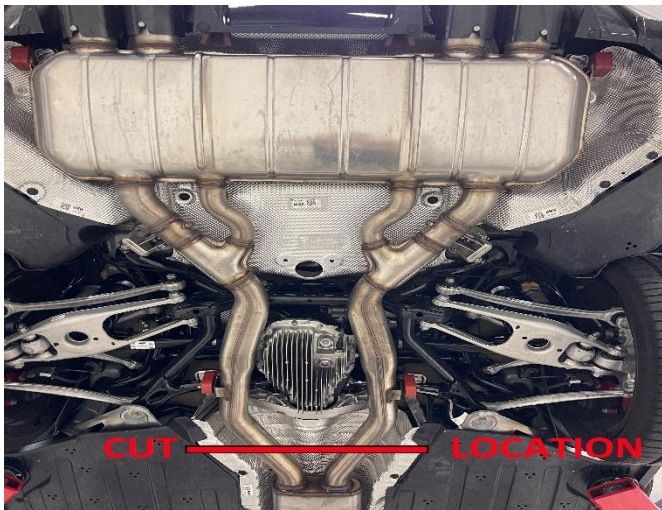

STEP 2:

The following steps include removal of the rear silencer

The front silencer will remain on the vehicle. If installing both axle back and mid pipe at the same time, also refer to instruction manual for the D660-0101.

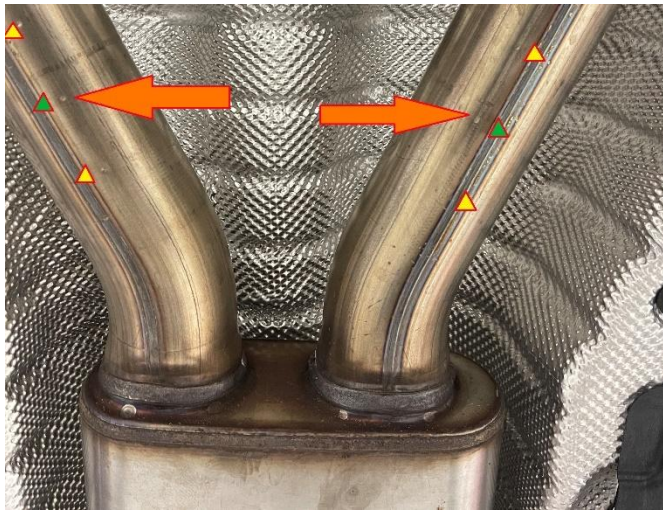

STEP 3:

Locate the cut point. There are dimples marked at 3 separate locations on each tube. These can be seen just aft of the most rear silencer

You will be cutting at the CENTER punch mark as shown.

Protect the rear silencer from falling




STEP 4:

Cut through exhaust pipes at the center punch mark point with a suitable tool

Ensure the cuts are perpendicular to the pipes

Removal of entire system is acceptable, but ensure that seals are replaced at the front of the system per BMW recommendations

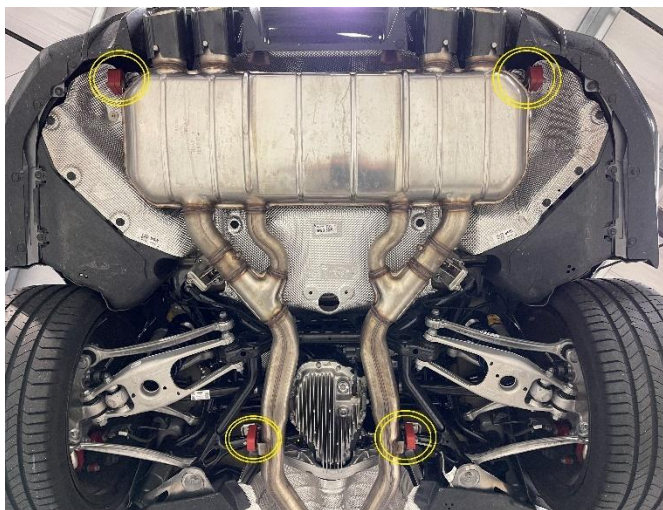

STEP 5:


Locate the 4 rubber hangers



STEP 6:

Remove the 4 rubber hanger mounts from the stock silencer

This will drop the exhaust from the vehicle. A stand or 2nd person is recommended to help lower the system from the vehicle.

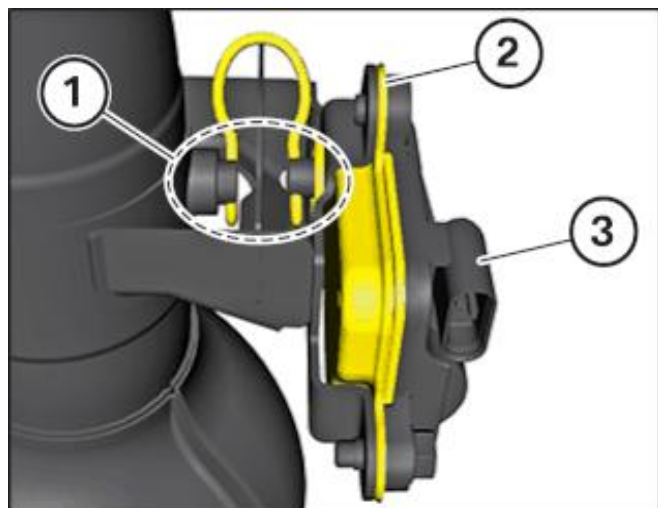


STEP 7:

Loosen and remove the screws holding on the actuator motor

Remove the spring (1), actuator heat shield (2) and actuator motor (3) from both sides of silencer

These motor (3) will be re-used

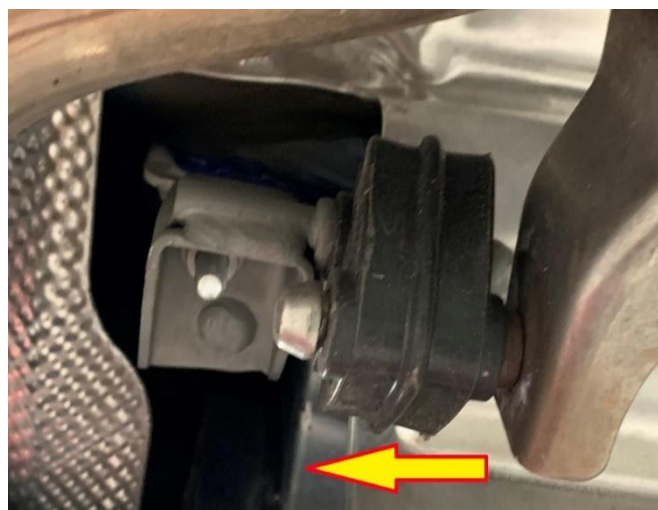


STEP 8:


Remove the 4 rubber hanger mounts from the stock silencer

It is recommended that each one is immediately transferred to the Dinan exhaust system to ensure proper location and orientation

VALVE-ACTUATOR INSTALLATION

Following the diagrams below, attach the actuators, brackets, and springs to the Dinan exhaust valves using the provided hardware.

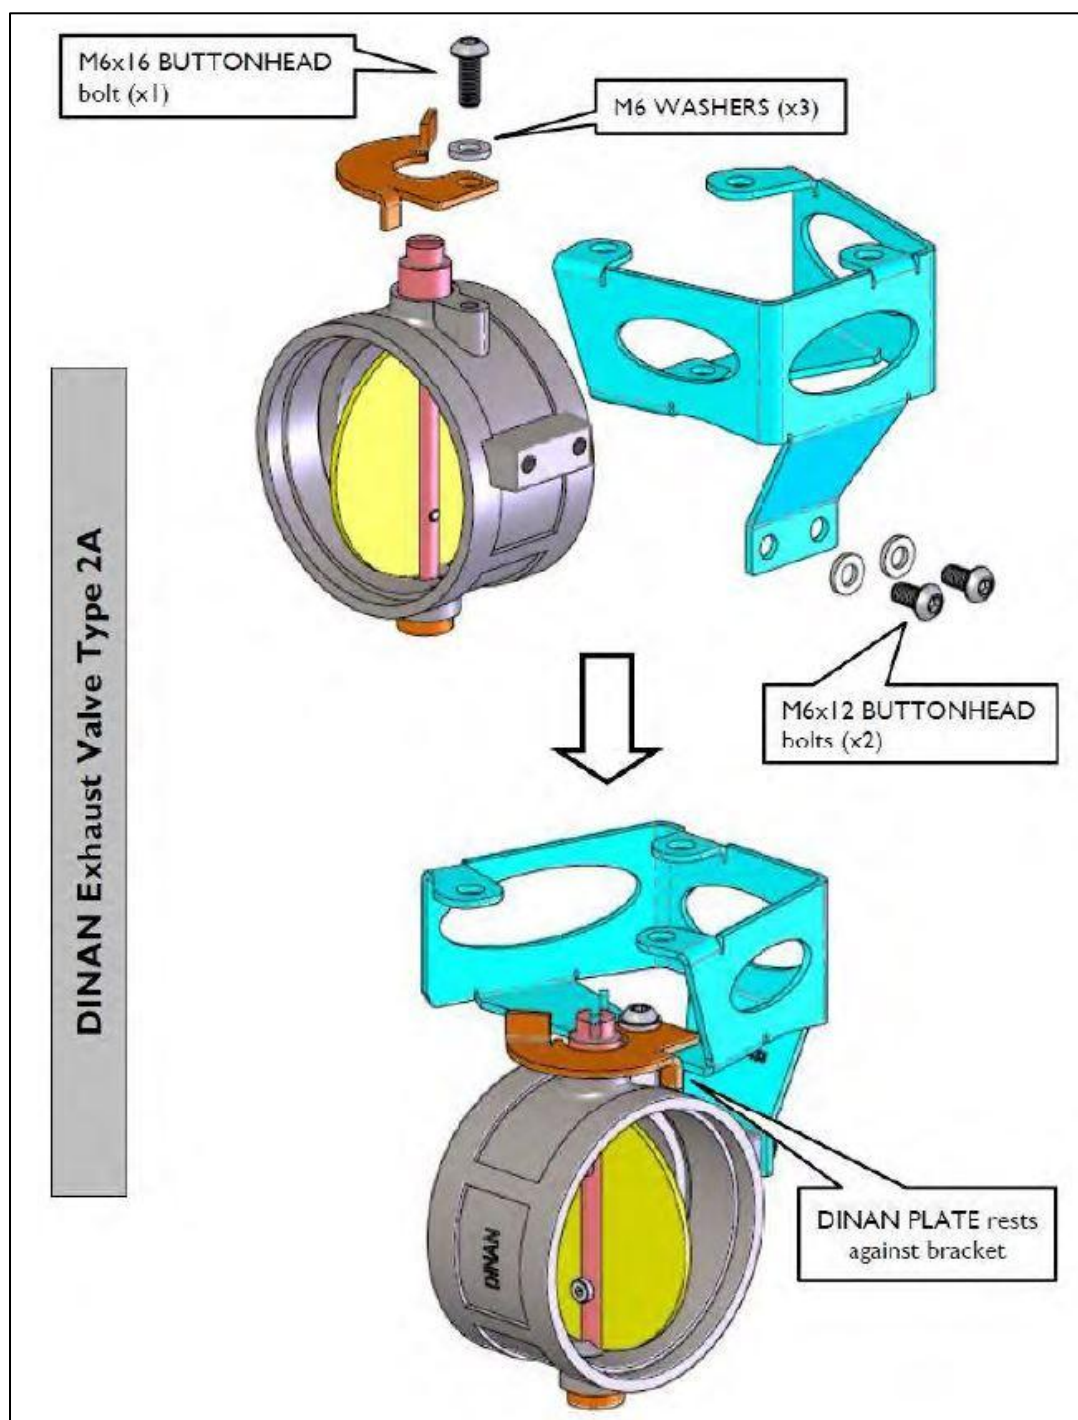

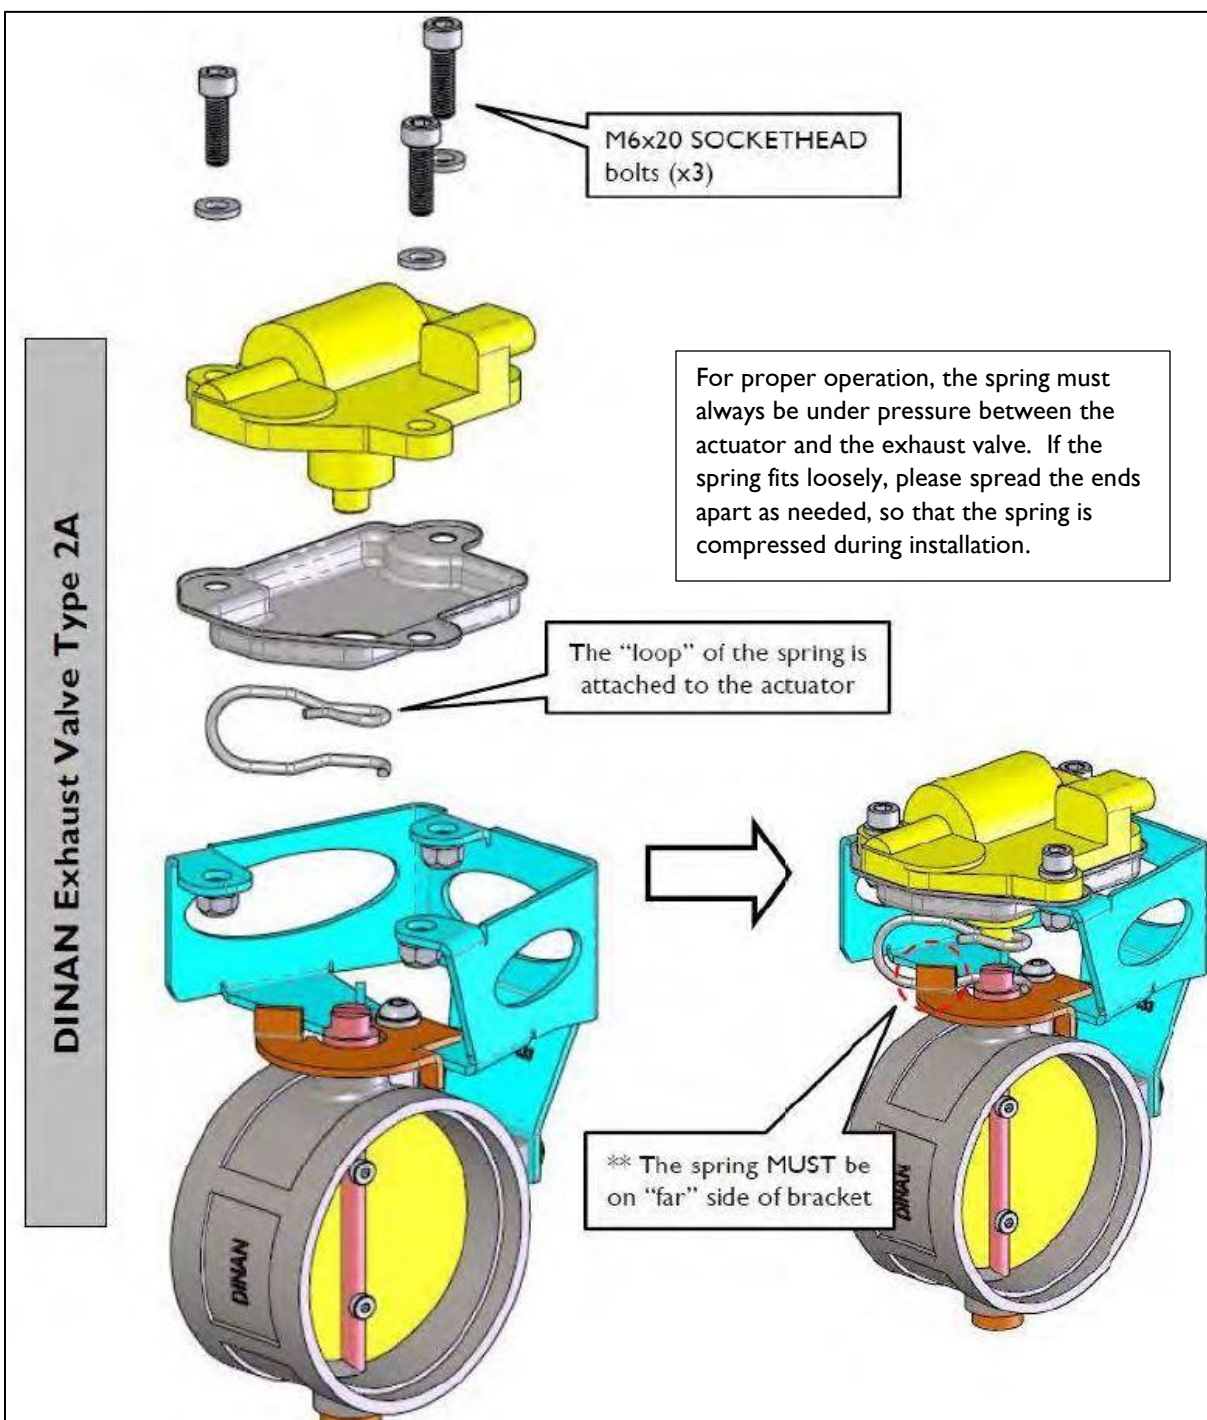

DINAN EXHAUST INSTALLATION



STEP 1:

As noted in the final removal step:

Slide all rubber hangers onto the Dinan Exhaust system in the proper orientation.

There are 4 total:


- 1 for each inlet tube
- 2 for the axle back muffler section



STEP 2:


Slide the 2.75" single wide clamps over the inlet tubes

Slip fit the inlet tubes over the stock tubes. Do not tighten at this time

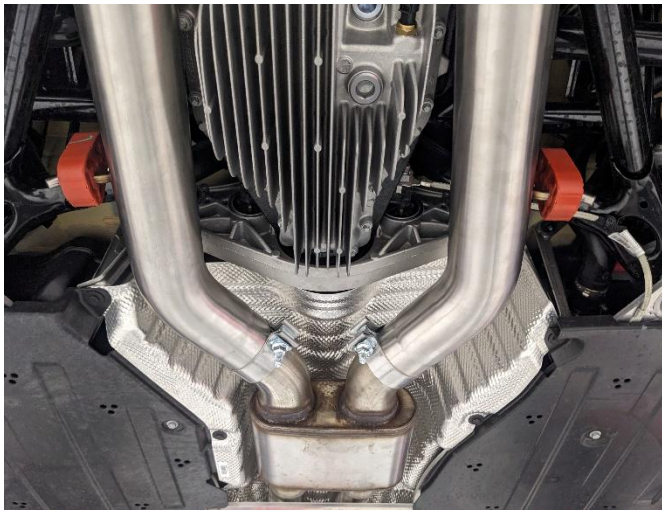

STEP 3:

Properly seat hangers and tighten with nut to the vehicle.

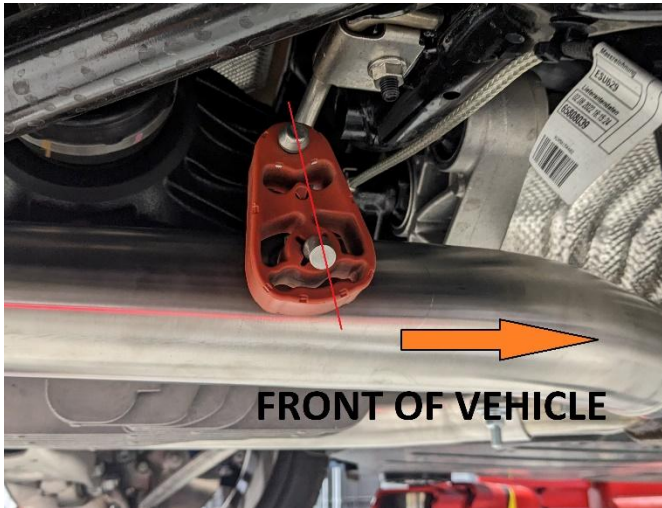

STEP 4:

Once hanger plates are tightened to vehicle, adjust pipe so the rubber hanger is angled towards the front of the vehicle as shown.

Repeat for both sides.

Only snug tight the clamps, as adjustment in the pipes may be needed to properly align the muffler assembly section.



STEP 5:

Place 3" double wide clamps onto the muffler assembly front pipes, 2 sides.

While holding muffler assembly in place, slide clamps over previously installed inlet pipes. The clamps shall split the difference between the pipes of the inlet tubes and muffler assembly.

Do not tighten the clamps at this time as adjustment is needed.



STEP 6:

Position the muffler section into place and secure hangers to vehicle.




STEP 7:

When installing the exhaust tips, a 13mm ratcheting wrench (or equivalent) is recommended.




STEP 8:

To permit smoother tightening, add some anti-seize inside the barrels of the exhaust tip clamps.

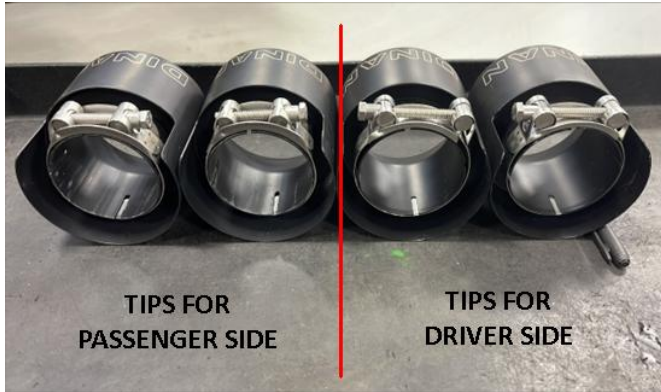

STEP 9:

Assemble the 3" single-wide clamps to the exhaust tips. Please orient the bolt heads toward the centerline of the car as shown. This arrangement will be helpful in the following steps.

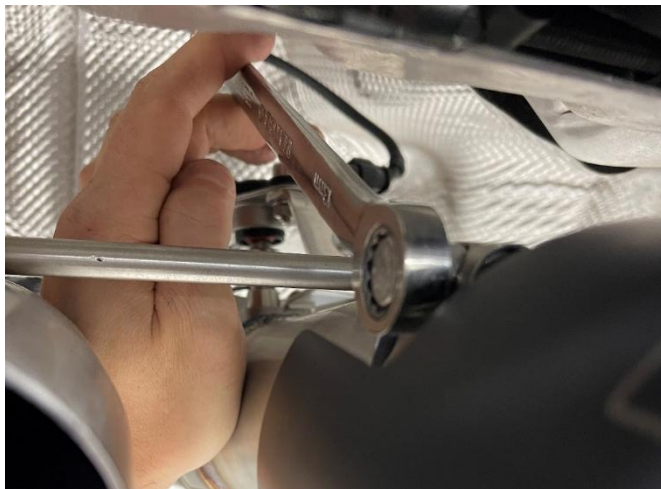

STEP 10:

NOTE – For ease of access, it is recommended to install the outer exhaust tips before the inner exhaust tips.

Slide the outer exhaust tips into place. The CENTER 'N' in DINAN shall be pointing straight up.

Using the 13mm wrench, snug the clamp as shown. Do not fully tighten at this time.



STEP 11:

Slide the inner exhaust tips into place. The CENTER 'N' in DINAN shall be pointing straight up.

Using the 13mm wrench, snug the clamp as shown. Do not fully tighten at this time.

**STEP 12:**

Ensure the tips are parallel to each other. Also verify that the CENTER 'N' in DINAN shall be pointing straight up.

It is recommended that the tips be offset to each other 1/8"-1/4". See next step.

Tighten clamps of tips once desired positioning of tips is achieved.

**STEP 13:**

Notice how the tips sit and are positioned in the vehicle. If one side is higher than the other, rotation of inlet tube will help level out the tips.

Have an assistant push the exhaust system towards the front of the car and also upward. This may press the tips into the bumper slightly.

Tighten all 4 pipe clamps and let system rest.

ALL HANGERS SHALL BE ANGLED TOWARDS THE FRONT OF THE AS SHOWN.

**STEP 14:**

There are 2 wire extension harnesses that need to be installed.

The picture shown here is of the original connector.

Connect each extension harness to each original connector.

**STEP 15:**

Loosen the heat shield panel and feed the extension harness through as shown in this location.

Allow some slack when plugging into the motor.

The remaining harness will sit in the inside cavity of the heat shield.

Use provided zip ties for cable management.

**FINAL STEP AND CHECK:**

1. ENSURE PROPER POSITION OF EXHAUST TIPS
2. ENSURE ALL PIPES HAVE CLEARANCE
3. ENSURE MOTORS ARE PLUGGED INTO WIRE HARNESSES
4. ADJUSTMENT MAY BE NEEDED ON TIPS AND SYSTEM IF DESIRED PLACEMENT IS NOT TO YOUR LIKING.
5. **ENJOY**