

FRONT DIFFERENTIAL SKID PLATE

08-18 JEEP WRANGLER JK

SPJK-12



TOOLS REQUIRED

- 1/2", 13mm, 16mm socket

SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1 Hour

Time to install this should only take about one hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (2) M10x25 hex bolts
- (2) M10 washers
- (2) M10 spring washers
- (5) 5/16-18x3/4 hex flange bolts





STEP 1 | Place your vehicle on a flat surface.



STEP 2 | Remove the (5) bolts holding the differential cover using a 13mm socket.

Note: Avoid pulling or disturbing the diff cover to avoid oil leaks. If you plan to service the differential, now is a good time to do that.

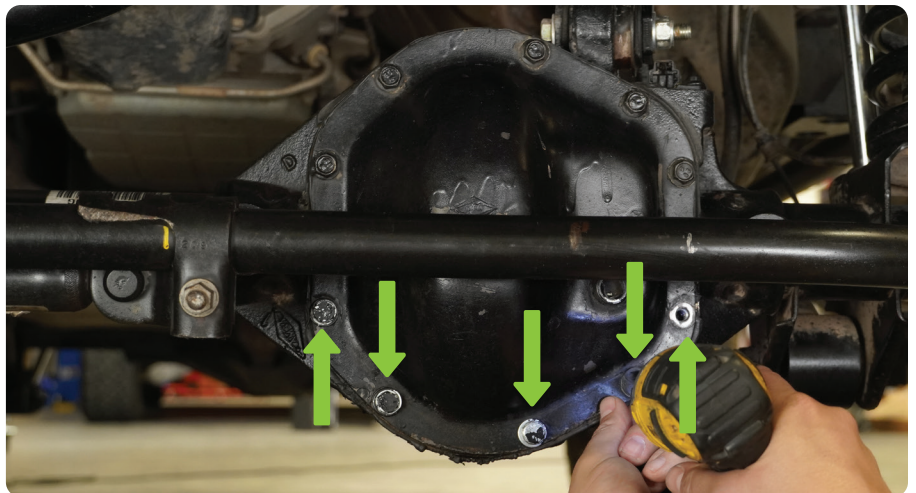

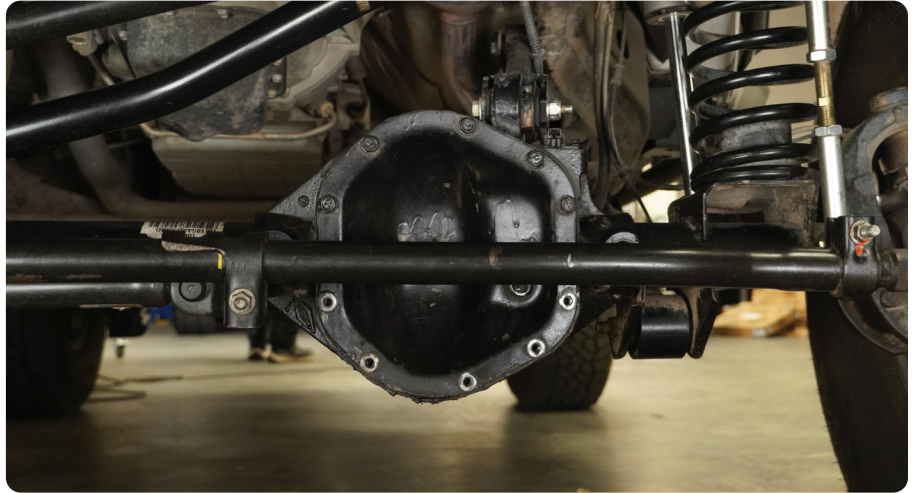

STEP 3 | Place the skid plate on the differential cover and install the (5) 5/16 bolts.



STEP 4 | Loosely tighten your bolts on the skid plate to your cover.





STEP 5 | On the back of the differential, place the “U” shaped bracket over your driveshaft.



INSTALLATION MANUAL

STEP 6 | Install the (2) M10x25 bolts, spring washer, and washers into your skid plate.



STEP 7 | Secure the bolts using a 16mm socket.



STEP 8 | Using a 1/2" socket, tighten diff cover bolts to 30 ft-lbs.

Congratulations on the finish installation of the DV8 Front Differential Skid Plate.

