

IMPORTANT

READ BEFORE YOU BEGIN INSTALLATION

IT IS CRITICAL FOR YOUR SAFETY THAT YOU CAREFULLY READ AND FOLLOW THE SAFETY CAUTIONS AND INSTALLATION INSTRUCTIONS BOTH PRIOR TO AND DURING INSTALLATION.

USER SAFETY CAUTION

During installation, be mindful of the potential for sharp edges on the product or vehicle. Taking proper safety precautions helps ensure a safe and smooth installation process.

Always wear protective gloves and handle components with care to reduce the risk of injury.



TEMPERATURE SURFACE CAUTION

During high temperatures or extended sun exposure, surfaces of this product may become hot to the touch, posing a risk of burns or injury. Use caution when handling the product in hot weather and allow time for it to cool before contact.

Always check surface temperature before use to ensure safe handling conditions.



FASTENER TORQUE CAUTION

All fasteners must be tightened to the specified torque values provided in the installation instructions to ensure proper fit and safe operation of the tonneau cover. Under- or over-tightening can lead to product failure, potential damage to your vehicle, injury, or safety hazards while driving.

Always use a calibrated torque wrench and follow the specifications in the installation instructions.



PINCH POINT SAFETY CAUTION

This tonneau cover may create pinch points when closing or operating near solid surfaces such as the truck bed rails or tailgate. To prevent injury, keep hands, fingers, and other body parts clear of moving parts during operation.


Always operate the cover slowly and with caution to ensure safe and proper use.



ENTRAPMENT SAFETY WARNING

This tonneau cover does not feature a manual release mechanism from inside the truck bed. To prevent the risk of entrapment, never allow anyone to be inside the bed of the truck when the cover is closed.


Always ensure the area is clear before closing the cover, and keep the cover securely latched when not in use to avoid accidental closure.

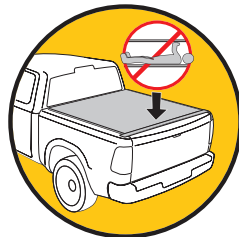

COVER ATTACHMENT WARNING

A partially rolled up or unsecured cover may detach during transit, risking vehicle or property damage and personal injury.

Always verify the tonneau cover is properly secured before operating the vehicle.

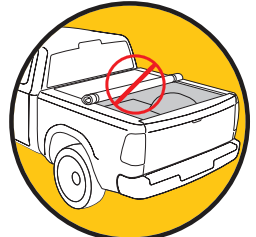

CARGO TRANSPORT WARNING

When transporting cargo that is taller than the truck bed, the cover must be fully rolled open and securely fastened with both retainer straps. An unsecured cover can detach while driving, risking vehicle or property damage and personal injury.


Never operate the vehicle with a partially rolled up cover.



COVER POSITION WARNING


Before operating the vehicle, always verify the tonneau cover is either fully rolled open and secured with both retainer straps or fully rolled closed and securely latched down.

Never operate the vehicle if the tonneau cover is not properly secured.

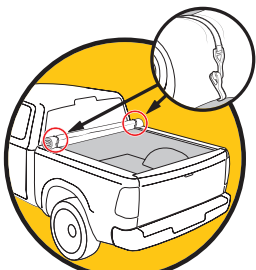


NISSAN FRONTIER 2022+ HARD ROLL-UP

NISSAN FRONTIER 2022 and NEWER SIDE RAIL CLAMPING AND BULKHEAD SEAL INSTALLATION

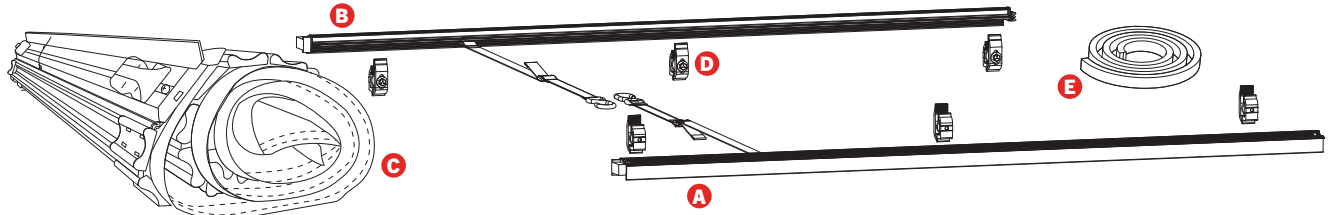


PARTS INCLUDED IN YOUR KIT:

- A** 1x Driver side rail
- B** 1x Passenger side rail
- C** 1x Cover assembly
- D** 6x Clamps (P/N 1118782)
- E** 1x Bulkhead seal (P/N 1117838)

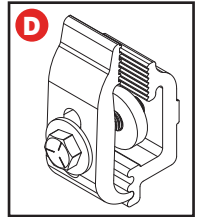


Follow these instructions to install cab weather seal, side rail clamps, and cab header on your 2022 or newer Nissan Frontier pickup. Refer to Owner's/Operating Manual for complete installation instructions.

- 1 Weather seal installation:** Install bulkhead seal (E) to the inside front bulkhead, covering full width (see below). Align top edge of seal flush with top edge of bulkhead. Slowly peel backing and press seal against bulkhead as shown.

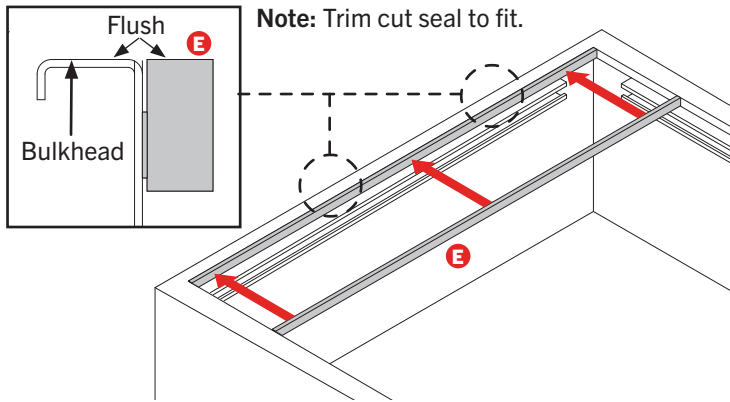



- 2 Side rail installation:** Position side rails (A and B) against cab weather seal (E) as shown below. See Owner's/Operating Manual for complete instructions.

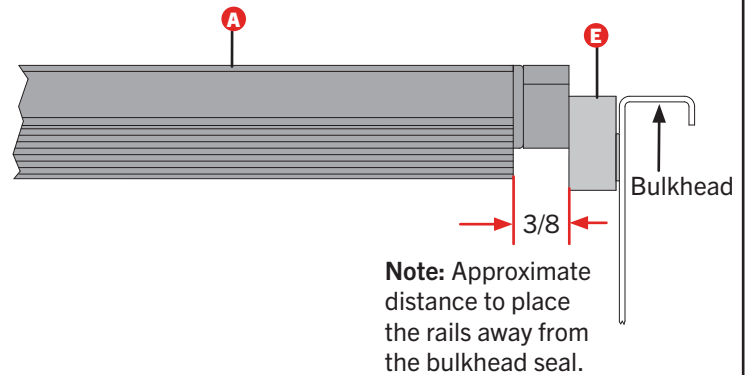


If your Nissan Frontier has Utility Rails, follow step 3 to successfully clamp the side rails to the trucks box.

- 3 Side rail clamp installation:** Install clamps (D) to both the driver (A) and passenger rail (B), three clamps per rail. **Note:** the middle clamp will not use the black plastic round washer installed on the clamp. **Torque clamps to: 8ft-lbs (11 Nm).**


Note: Remove the black plastic washer from the clamps placed in the middle.

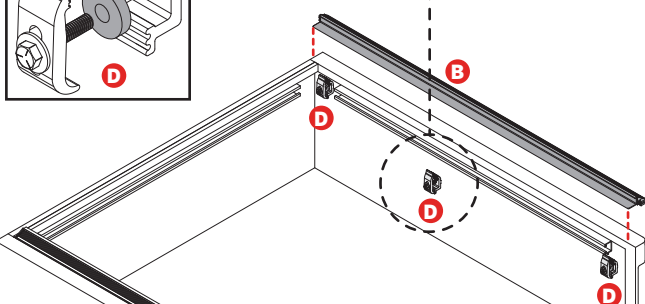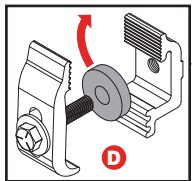


Front clamp with black plastic washer.

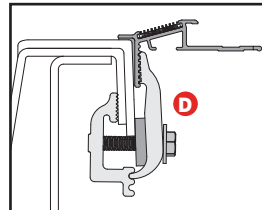

Middle clamp without black plastic washer.


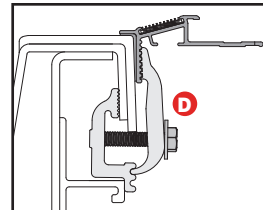


Rear clamp with black plastic washer.

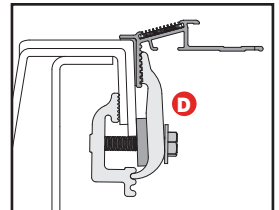


Clamping Side Rails To Truck Beds With Utility Rails Continued.

Note: To Prevent the front and rear clamps (D) from rotating under the truck rail while being tightened, the black plastic washer must fit in between the side rail clamp and the truck's bed caps as shown.

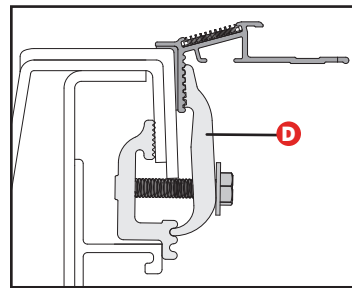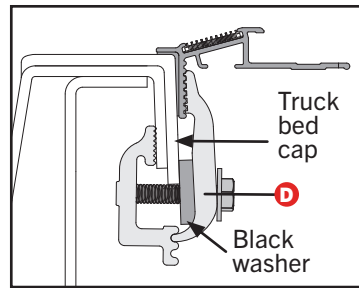

Note: The middle clamps do not need black plastic washers. The utility rail will prevent the clamps from rotating under while being tightened.



Torque clamps to: 8ft-lbs (11 Nm)

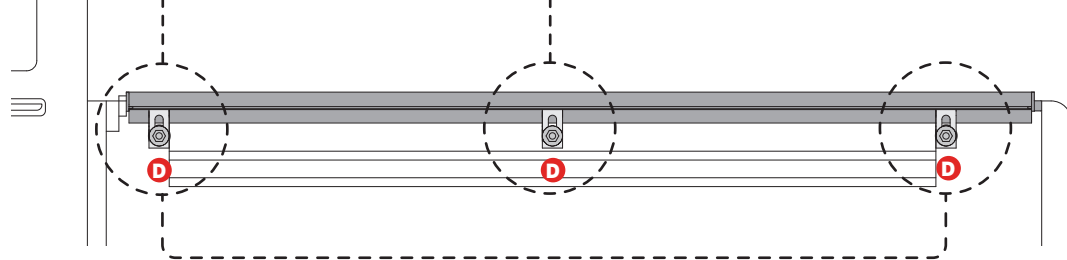

If your Nissan Frontier Does Not have Utility Rails, follow step 4 to successfully clamp the side rails to the trucks box.


4 Side rail clamp installation: Install clamps (D) to both the driver (A) and passenger rail (B), three clamps per rail. **Note:** All clamps will require the use of the black plastic round washer installed on the clamp.

Note: To Prevent the front and rear clamps from rotating under the truck rail while being tightened, the black plastic washer must fit in between the side rail clamp and the truck's bed caps as shown.

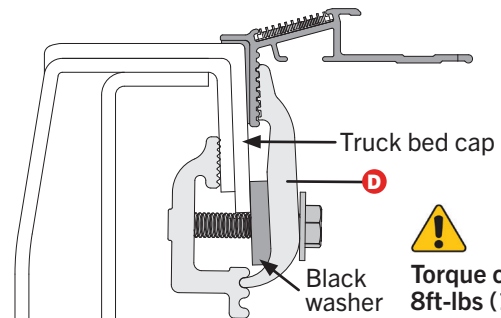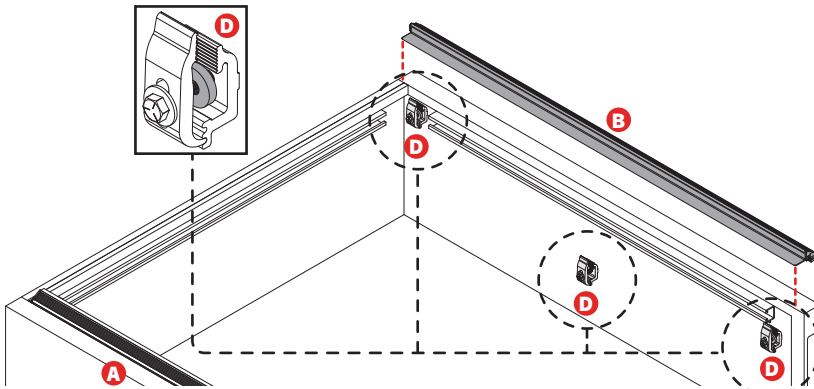

Torque clamps to:
8ft-lbs (11 Nm)

5 Cover assembly installation: Install the cover assembly (C) to the driver (A) and passenger rail (B). Continue installing the cover assembly by using the main owner's/operating manual.

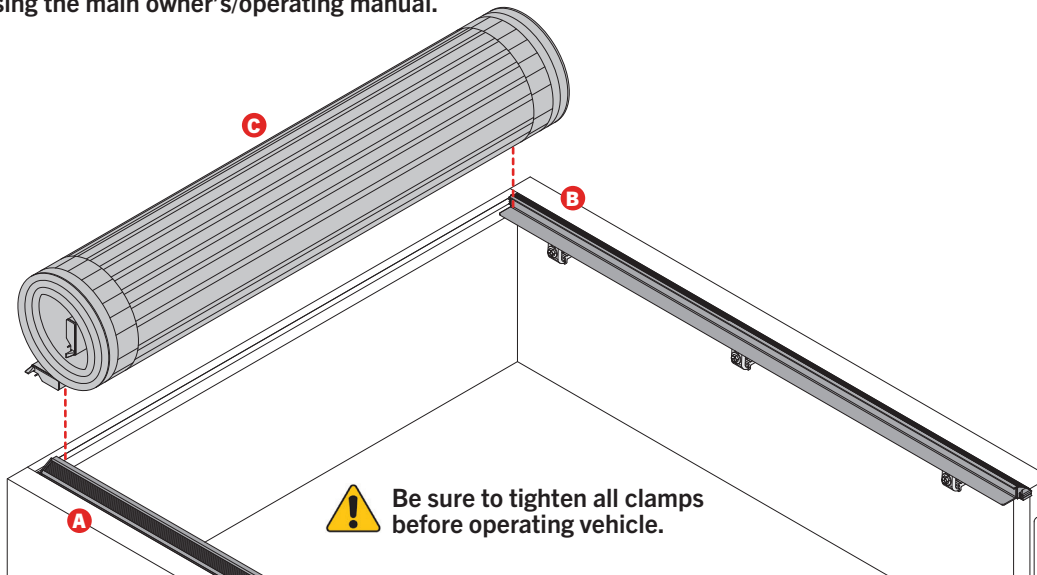

Be sure to tighten all clamps
before operating vehicle.