

• T A I L G A T E •

MOLLE PANELS

- MODULAR LIGHTWEIGHT LOAD CARRYING EQUIPMENT -

INSTRUCTION GUIDE



1-800-247-3974

Monday-Friday 8:00am - 5:00pm (Central Standard Time)
Contact your PUTCO® dealer for other quality accessories.



**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION
AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED**

REQUIRED TOOLS



5mm Hex Key



4mm Hex Key



CONTENT LIST

DESCRIPTION	QTY
Molle Tailgate Plate	1
Molle Backing Plate	1
M6 X 70 Button Head Bolt	2
M6 X 50mm Button Head Bolt	3
M8 X 25mm Button Head Bolt	3
M6 Washer	5
M8 Washer	3
M6 X 13mm Spacer	2
M6 X 25mm Spacer	5
M8 X 13mm Spacer	3




Installation Instructions:

- 1 Remove the access panel from the tailgate.
- 2 Insert the M8 bolts through the backing plate and then the 13mm spacer. Also, insert the M6 X 75mm bolts through the molle plate, 1 inch spacer, backing plate, and 13mm spacer as shown in the figure below (figure 1).

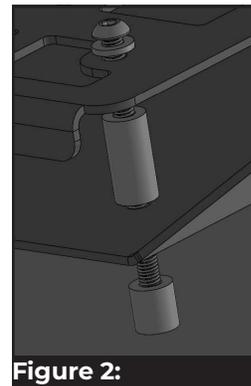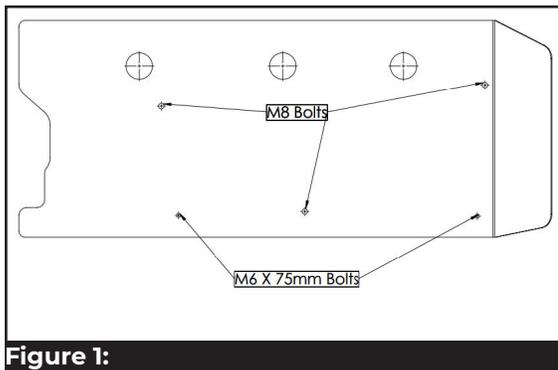

- 3 Carefully align and thread the bolts from the previous step into the pre-existing holes in the tailgate (figure 2).

- 4 Insert the M6 X 50mm bolts through the molle plate and 1 inch spacers, and thread them into the preexisting holes in the tailgate (figure 3).

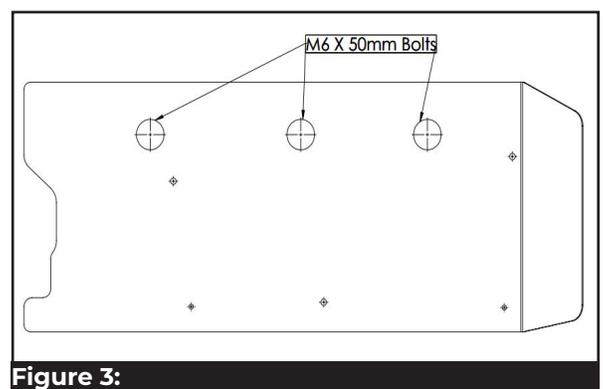

- 5 With the molle plate in place on the tailgate, go back and make sure the bolts are tight, including the three that hold the backing plate. All the bolts should be snug, but do not overtighten. The installed molle plate should look like the figure below.



**Your new MOLLE Panel is now
successfully
installed on your vehicle!**