

OPEN FIRST!!

Installation Instructions

Set # 5.5187

Rear Sway Bar Bushing Set 2009-2018 Dodge Ram 1500

ENERGY
SUSPENSION 

1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

© 2023 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle. Wheel alignment is almost always disturbed when suspension components are removed or replaced. It is recommended that you have the alignment checked on your vehicle at a qualified alignment shop. Energy Suspension recommends that you read over all the installation instructions and check all P/N's and quantities in the parts list before you start. Call customer service at 949-361-3935 if the parts in your kit do not match this parts list. Prior to installation, make sure that your car is in excellent mechanical condition and that there are no suspension or steering related problems. This part has been designed to work only with a car that is in good state of repair. No matter how carefully we design our parts, this is one area we have no control over and cannot be held responsible.

Parts List

- 2 - 05P06132 Sway Bar Bushing
- 2 - 08P08464 End Link Bushing
- 2 - 15.10.253.39 .750" x .500" x 1.200" Sleeve
- 1 - 9.11107 Formula Five Grease



Remove the OEM end link bushings using a hydraulic press or bushing removal tool. Clean and inspect the bore and edges for damage. Remove any burrs or sharp edges. Apply a light coat of silicone grease to the inside of the bore and all surfaces of the new bushings that will contact metal. Push the new bushings into the bore of the end link using an arbor press, bench vise or c-clamp. Apply a light coat of silicone grease to the inside bore of the new bushings. Apply a light coat of silicone grease to the outside of the new metal sleeves and push into the new bushings using an arbor press, bench vise or c-clamp.

See example images on page 2



OPEN FIRST!!

Installation Instructions


Set # 5.5187

Rear Sway Bar Bushing Set
2009-2018 Dodge Ram 1500

ENERGY SUSPENSION[®]

1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

© 2023 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

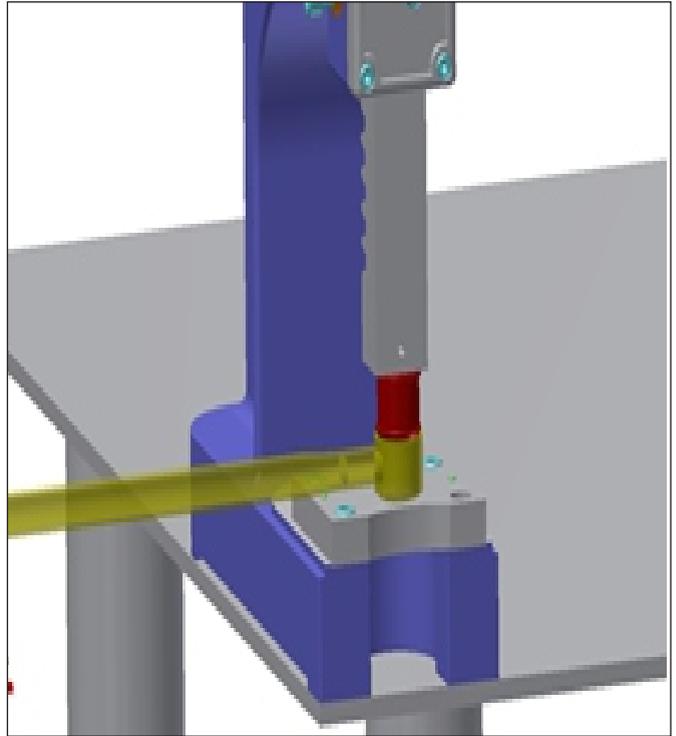

Tighten all fasteners to factory specs. After installation is complete, Energy Suspension recommends an alignment be performed at a qualified alignment shop. Check all fasteners after 100, 200 and 500 miles and tighten to factory specs.