

Installation Instructions

Rugged Fender Flares
Chevy Silverado 1500,2500,3500 (07-13)
FF1026

Please read instructions entirely before installing this product.

Hardware Included	QTY
Extrusion	38ft
CLIP .6mm	12
Alcohol Towelette	6


Ensure that both left- and right-hand Fender Flares suit the profile of the vehicle. Note the areas where the Fender Flares comes into contact with the vehicle. NOTE: Before fitting Fender Flares remove any moldings, strips or existing flares from the wheel arch. If there is a body side molding, mark where the molding is to be cut, alternatively the Fender Flare can be cut to go around the molding. Be sure to allow enough room for the extrusion. **NO drilling of vehicle is required for Pocket Look Fender Flares. This is a non-drill product.**

FRONT FENDER FLARE INSTALLATION



STEP 1: Attach the included rubber seal to the Fender Flares. Peel back 2" of the adhesive backing and position on the Fender Flare. Attach the seal to the Fender Flare, peeling back a few inches at a time. Ensure pressure is used to secure rubber seal to Fender Flare edge. Attach rubber seal along all areas where the Fender Flare makes contact with the vehicle body.

Actual parts may differ from picture

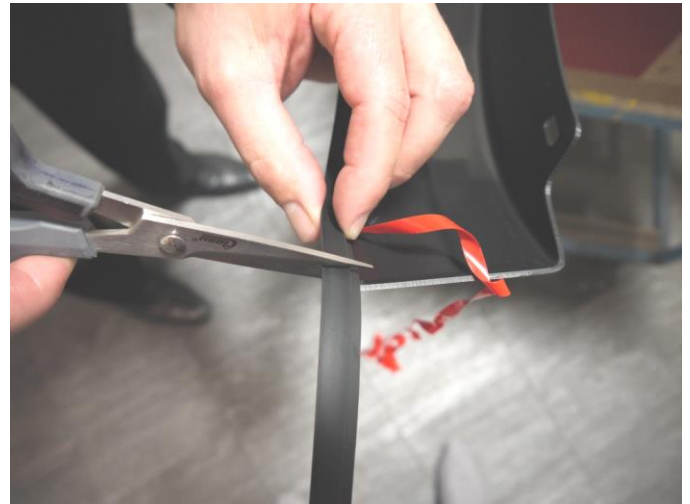

STEP 2: Trim any excess rubber seal and discard.

Installation Instructions

Rugged Fender Flares
Chevy Silverado 1500,2500,3500 (07-13)
FF1026



STEP 3: Clean the body areas where the Fender Flares will make contact. Ensure fenders are dry prior to install.



STEP 4: Place the Fender Flare onto the vehicle in the position of best fit. Note where the slots in Fender Flare, shown with arrows, align with the existing screws in the vehicle. Remove Fender Flare. You will use the original manufacturer's hardware in the wheel arch of the vehicle to attach the Fender flares. Remove the x4 9/32" (7mm) socket head screws from the wheel arch on the vehicle.



STEP 5: Place the front Fender Flares onto the vehicle and line up the holes on the part with the factory screw holes of the vehicle. Fit the Fender Flares loosely with the factory hardware removed in previous step. Align the Fender Flares as desired, when satisfied tighten the screws fully to ensure rubber seal is flush neatly against the body.

Actual parts may differ from picture

Installation Instructions

Rugged Fender Flares
Chevy Silverado 1500,2500,3500 (07-13)
FF1026

REAR FENDER FLARE INSTALLATION



STEP 6: Attach the included rubber seal to the Fender Flares. Peel back 2" of the adhesive backing and position on the Fender Flare. Attach the seal to the Fender Flare, peeling back a few inches at a time. Ensure pressure is used to secure rubber seal to Fender Flare edge. Attach rubber seal along all areas where the Fender Flare makes contact with the vehicle body.

Actual parts may differ from picture



STEP 7: Trim any excess rubber seal and discard.



STEP 8: Clean the body areas where the Fender Flares will make contact. Ensure fenders are dry prior to install.



STEP 9: Loosely fit fender flares onto vehicle and attach with provided metal clips. To secure the Fender Flare, slide the black metal clips over the Fender Flare and the lip of the inner wheel arch. Make sure the barb of the clip is positioned in the slot of the Fender Flare. Ensure all fixing points are secure and that the rubber seal is flush neatly against the body.

Actual parts may differ from picture

Installation Instructions

Rugged Fender Flares
Chevy Silverado 1500,2500,3500 (07-13)
FF1026



STEP 10: Double check the front and rear Fender Flares, make sure all bolts are tightened and clips are securely fastened. Your installation is now complete. Do not clean Fender Flares with abrasive cleaners.

Actual parts may differ from picture