

INSTALLATION INSTRUCTIONS

OUTLAW DROP NERF BARS




APPLICATION:
2015-2026 Chevrolet/GMC Colorado/Canyon Crew Cab
PART NUMBER:
20-14015


CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	DRIVER OUTLAW DROP BAR	13MM SOCKET
2	1	PASSENGER OUTLAW DROP BAR	13MM WRENCH
3	3	DRIVER MOUNTING BRACKET A	15MM SOCKET
4	3	PASSENGER MOUNTING BRACKET A	15MM WRENCH
5	1	DRIVER MOUNTING BRACKET B	RATCHET
6	1	PASSENGER MOUNTING BRACKET B	TORQUE WRENCH
7	16	M8 CLIP NUT	
8	16	M8 HEX HEAD BOLT	
9	16	M8 SPLIT LOCK WASHER	
10	16	M8 FLAT WASHER	
11	16	M10 SERRATED FLANGE BOLT	
12	16	M10 SERRATED FLANGE HEX NUT	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

ITEM 1—Passenger Opposite

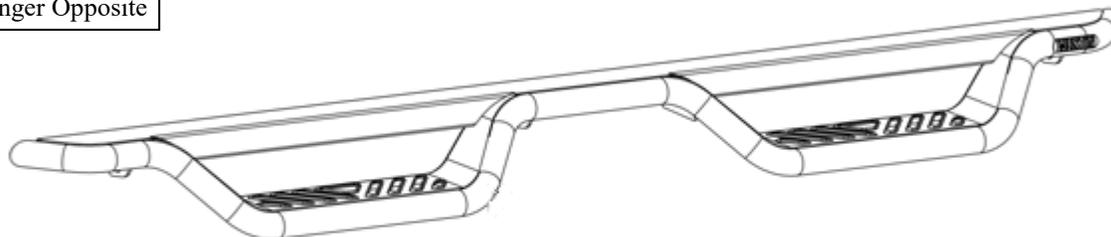


ITEM 3

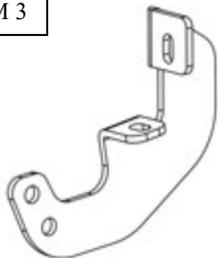


ITEM 4



ITEM 5

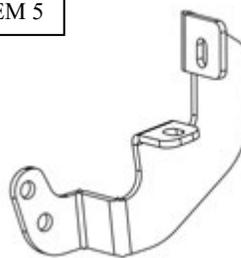

ITEM 6

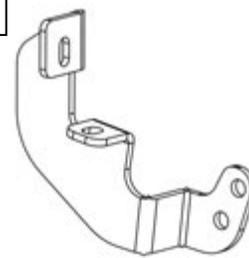

PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.

2. Locate and remove the rubber plugs on the rocker panel at each mounting location. See **Figure 1**.
3. Loosely install (1) Mounting Bracket A (**item 3**) using the M8 hardware (**items 7-10**). See **Figure 2**. *Note: If threaded holes are not on the vehicles' rocker panel, remove the rubber plugs at each mounting location and insert M8 nut clips.*
4. Repeat **Step 3** for every other bracket mounting location. See **Figures 3 and 4** for bracket orientation and locations.

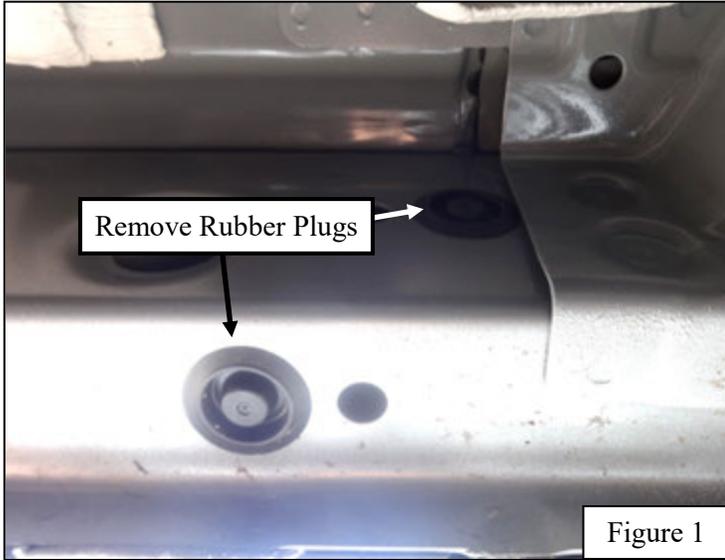


Figure 1

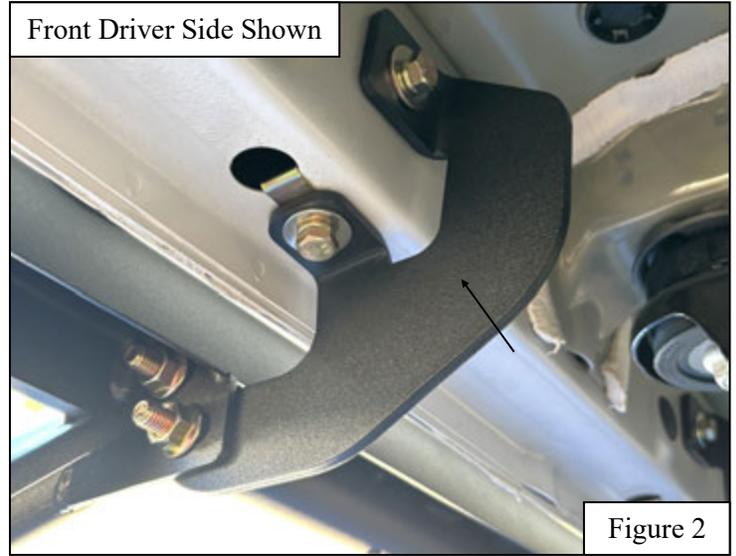


Figure 2

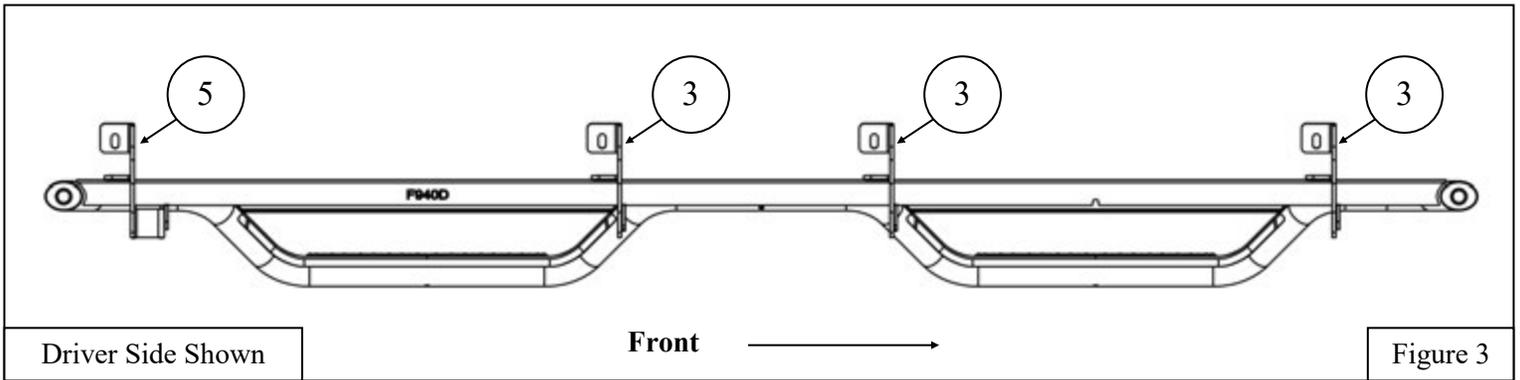


Figure 3


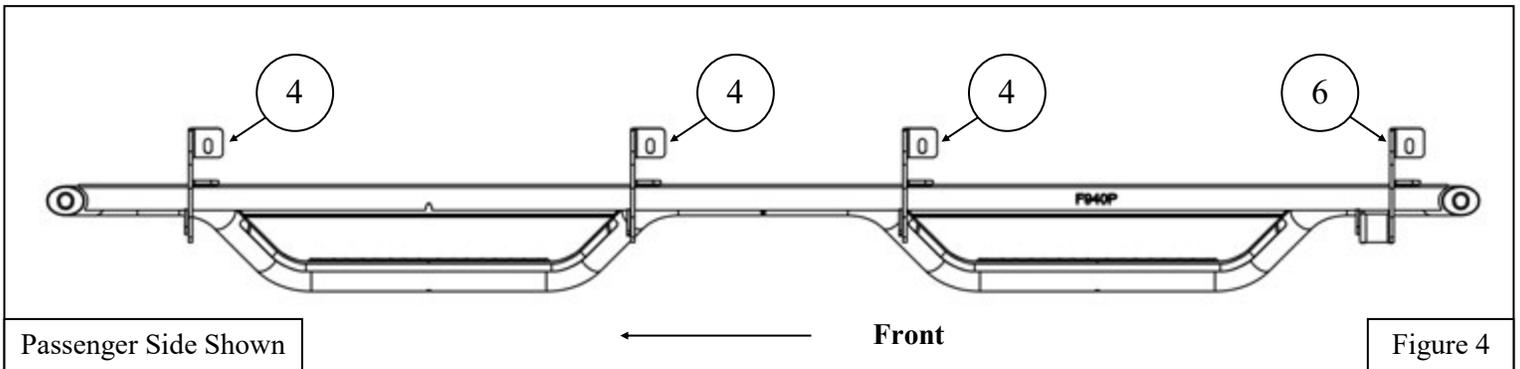


Figure 4

5. Loosely install the Outlaw Drop Bars (**items 1 and 2**) onto the mounting brackets using the M10 hardware (**items 11 and 12**). See **Figure 5**.
6. Align and adjust the Outlaw Drop Bars and mounting brackets as needed. Tighten and torque all hardware as specified: M8 hardware to 15-18 ft-lbs., M10 hardware to 35-38 ft-lbs.



INSTALLATION COMPLETE

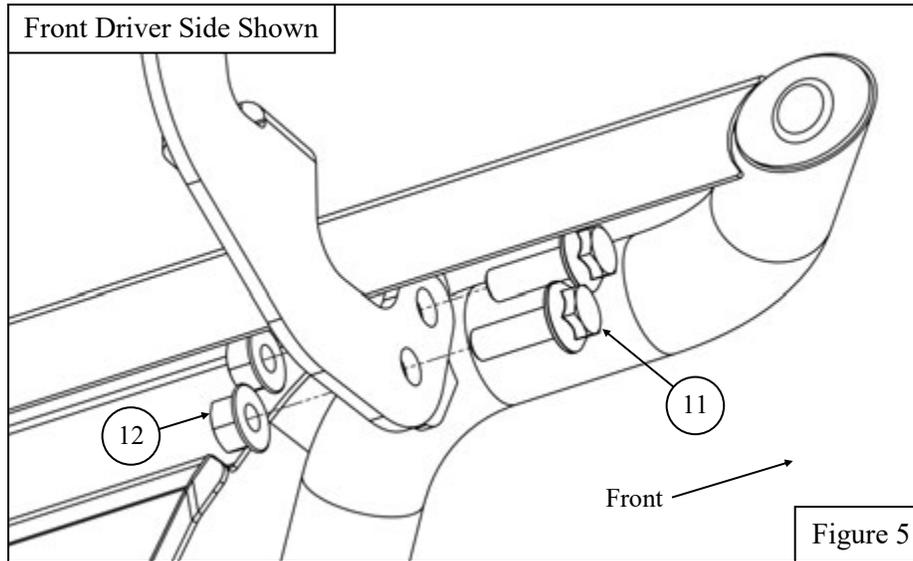

CARE INSTRUCTIONS

- Texture Black Finishes should be cleaned with mild soap and water only (do not wax).
- Gloss Black Finishes should be cleaned with mild soap and water.
- Polished Stainless products should be cleaned with mild soap and water. Stainless Steel polish may be used to remove small scratches.
- Regular waxing is recommended for Gloss Black and Stainless Steel products. Do not use wax that may contain abrasives.



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com