



2022+ Ford Maverick Installation Instructions



Manufacturer warranty covers material defects on new, never installed parts. Once installed, customer is responsible for all replacement part costs. Caution against blind spots during parking. Avoid curbs and excessive compression to flaps. **Check for sufficient exhaust, wheel, suspension clearances.**

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, 10mm & 11mm wrenches, pick.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages over time.

CONFIRM PARTS & QUANTITIES BEFORE INSTALLATION

Install on even surface using hand tools - no powered tools. **AVOID OVERTIGHTENING HARDWARE.**

MUD FLAP KIT PN MF145		PART DESCRIPTION	QUANTITY
MF145-LF		LEFT FRONT	1
MF145-RF		RIGHT FRONT	1
MF145-LR		LEFT REAR	1
MF145-RR		RIGHT REAR	1
BRACKET KIT PN BMF145			
BMF145		BRACKET	4
HARDWARE KIT PN HMF145			
1.5SS#8		SCREW	8
BLKNUT		NUT	6
HXBLT		BOLT	6
INS5		FASTENER	2
ORCLP		CLIP	4
SMF145-BAS		SPACER	2
SMWASH		WASHER	20

Do not fully tighten fasteners until mud flaps are completely aligned to vehicle.



2022+ Ford Maverick Installation Instructions

FRONT FLAP To access interior wheel well, turn steering wheel towards installation side.

Parts x 1 Flap → 1 x BMF145; 1 x 1.5SS#8; 2 x BLKNUT; 2 x HXBLT; 1 x INS5; 1 x ORCLP; 5 x SMWASH

Mount Rally Armor logo printed side of flap facing rear bumper.

IMAGES A/B Uninstall fasteners 1 & 2. Move liner aside. Install ORCLP over mount 1. Replace liner.

IMAGE C Place BMF145 over non-logoed flap side facing tire, then install SMWASH & HXBLT into mounts 3 & 4. SMWASH & BLKNUT mounts on logo-side 3 & 4.

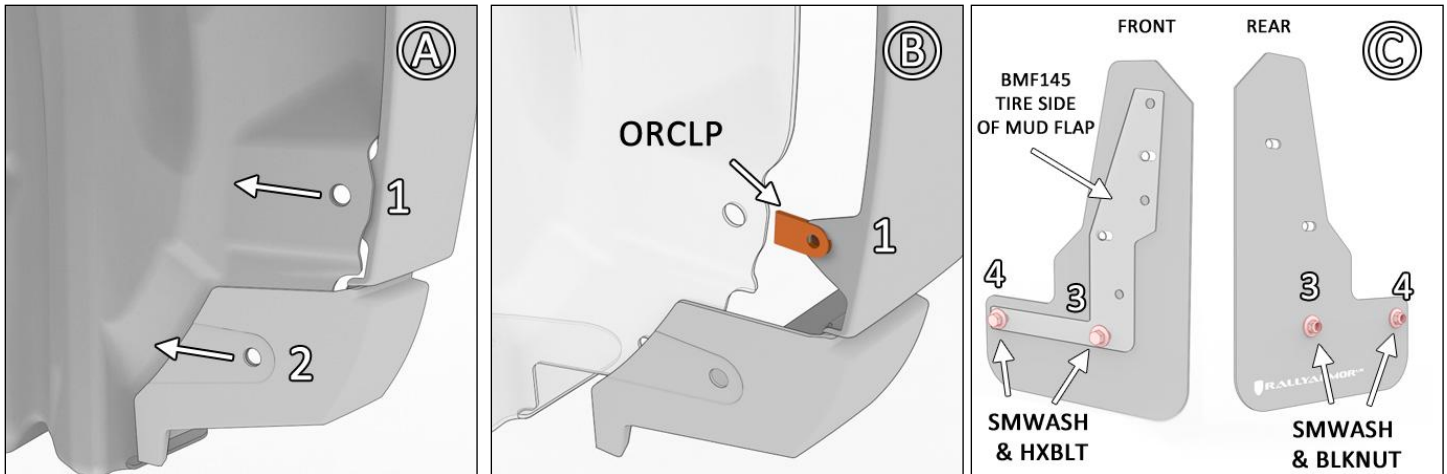


IMAGE D Install SMWASH & 1.5SS#8 into mount 1 and INS5 into mount 2.

IMAGE E Ensure flap is aligned to vehicle before hand-tightening washers just until flush to flap.

IMAGE F For varying tire/wheel offsets that require added clearance, adjust flap towards rear bumper.





2022+ Ford Maverick Installation Instructions

REAR FLAP Parts x 1 Flap → 1 x BMF145; 3 x 1.5SS#8; 1 x BLKNUT; 1 x HXBLT; 1 x ORCLP; 1 x SMF145-BAS; 5 x

SMWASH

Mount Rally Armor logo printed side of flap facing rear bumper.

IMAGES G/H Remove fasteners 1 - 3. Move liner aside. Install ORCLP over mount 1. Replace liner.

IMAGE I Mounts 2 & 3 are equipped with factory fastener clips.


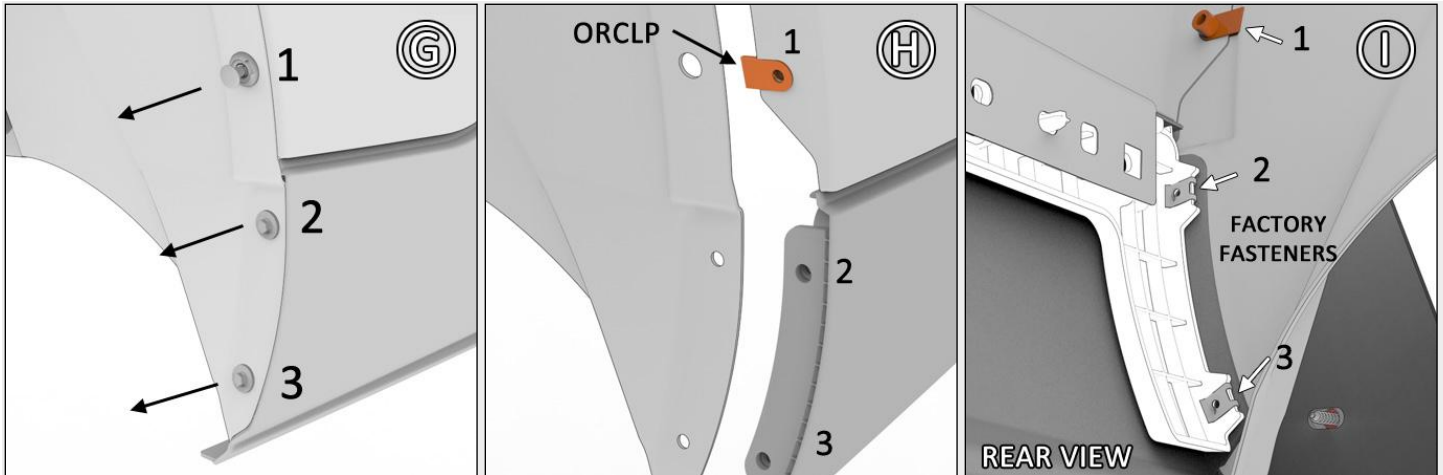


IMAGE J Place BMF145 over non-logoed flap side facing tire. Install SMWASH & HXBLT into mount 4. Fasten SMWASH & BLKNUT on logo-side of flap mount 4.

IMAGE K Place SMF145-BAS directly over vehicle liner mounts 2 & 3. Position logo-side of flap facing rear bumper and over SMF145-BAS. Install SMWASH & 1.5SS#8 into mounts 1 - 3.

IMAGE L Ensure flap is aligned to vehicle before hand-tightening washers just until flush to flap.

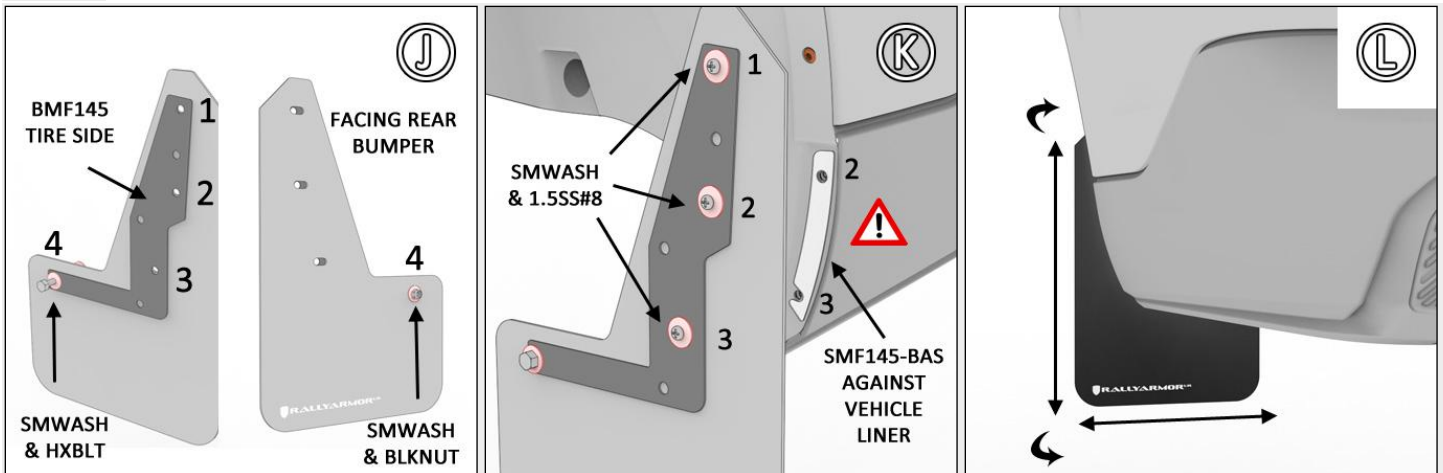

IMF145



2022+ Ford Maverick Installation Instructions

MF145 MOUNTING DIAGRAM

