




Tech Service: 800.486.0999 Volant.com

16357 PARTS LIST

1	VOLANT FILTER BOX	2	#064 CLAMPS		
1	VOLANT FILTER BOX ADAPTER	1	3 1/2" X 2 3/4" SLEEVE	1	VOLANT BRACKET (SHORT)
1	VOLANT DUCT	1	4" X 3" HUMP HOSE	1	1/2" RUBBER GROMMET
1	RAM FILTER W/CLAMP	2	1/4"-20 BOLTS	1	1/2" X 14" BREATHER HOSE
		2	1/4" WASHERS	1	1/2" X 11" VINYL TRIM
2	#056 CLAMPS				

TOP VIEW

FRONT VIEW

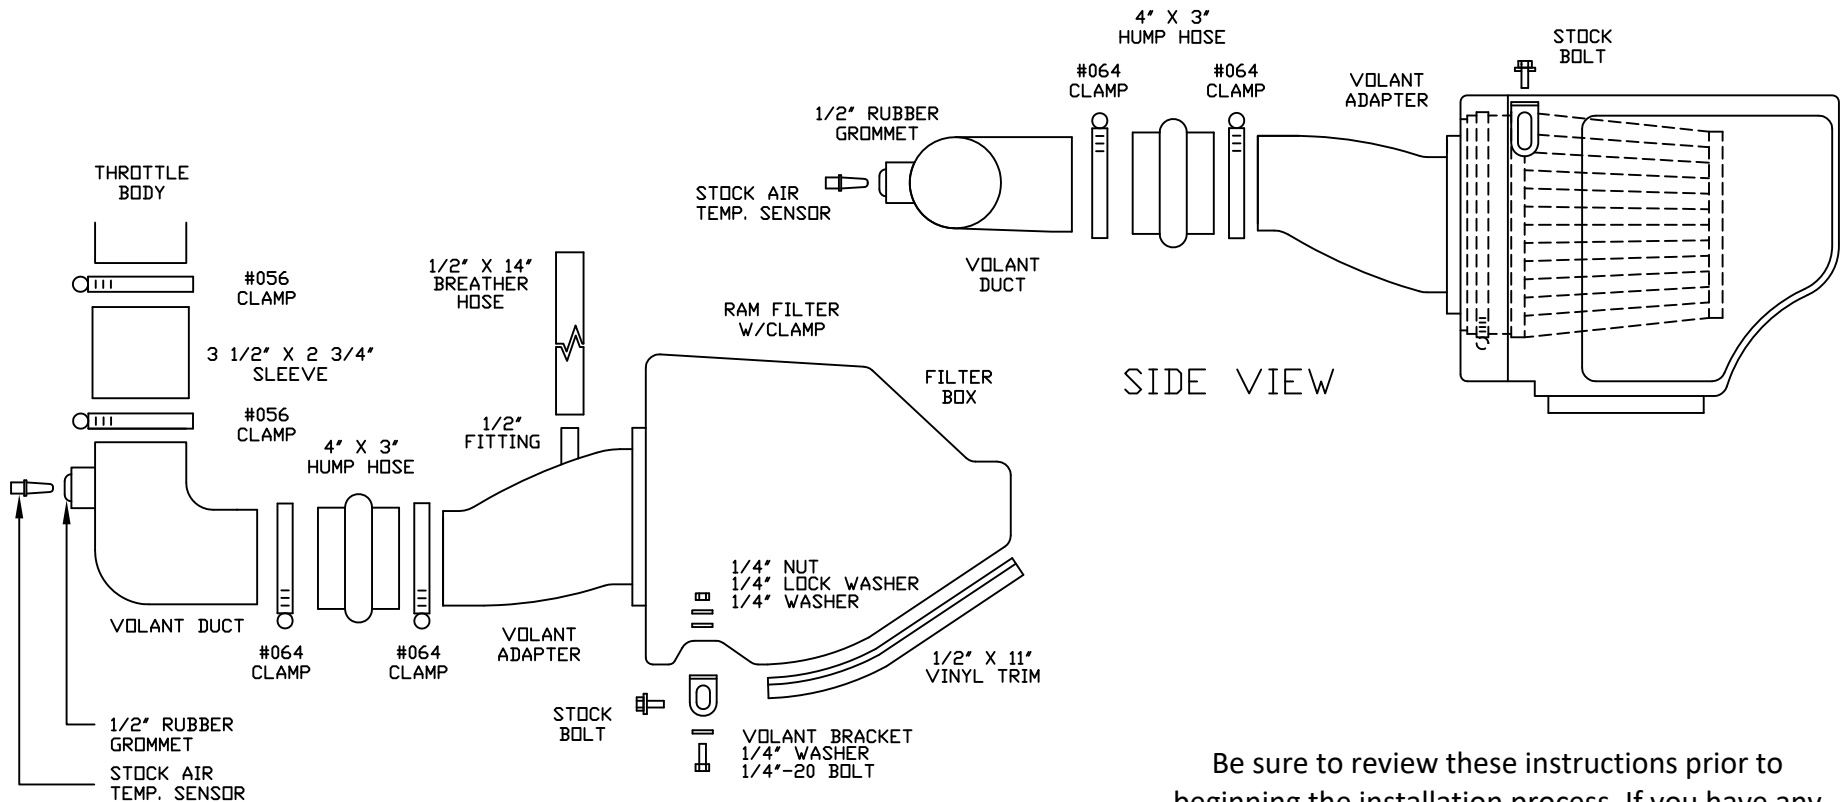

Be sure to review these instructions prior to beginning the installation process. If you have any questions about the enclosed parts or instructions, or if you encounter a problem during installation:
 CALL TECHNICAL SUPPORT: 800.486.0999
 OR VISIT OUR WEBSITE AT VOLANT.COM



Disconnect the negative battery cable and remove the engine cover by lifting up and pulling out.



Place the filter in the volant box and tighten the clamp through the access hole in the air box.



Press the ATS sensor into the rubber grommet.



Disconnect the wiring harness from the AIT sensor than twist the sensor and pull straight out.



Mount the volant air box in the factory location using the supplied hardware and the stock bolt.



Press the duct inside of the hump hose and sleeve and tighten the clamps.



Loosen the clamps holding the duct to the throttle body and air box. Remove the factory breather hose.



Install the supplied trim sponge on the core support.



Attach the supplied breather hose and ATS harness. Reinstall the factory engine cover.



Remove the factory breather hose from the crankcase and air box. Remove the air box mounting bolt and air box.



Attach the hump hose to the filter adapter and tighten the clamp.



ACTUAL PRODUCT MAY VARY FROM IMAGE SHOWN