



INNOVATIVE
**HEAT & SOUND
CONTROL**
SOLUTIONS

INSTALLATION INSTRUCTIONS

PART #902414 - XPEDITION 4 DOOR 3 PIECE KIT
PART #902415 - XPEDITION 2 DOOR 2 PIECE KIT
2024-2026 POLARIS XPEDITION FLOOR MAT KITS

**INSTALLATION QUESTIONS? CONTACT DEI AT 800-264-9472
OR VIA EMAIL AT TECH@DESIGNENGINEERING.COM**

NOTE OF CAUTION: Wear eye and hand protection when installing all materials.

PARTS CHECKLIST

PART # 902414
FRONT DRIVER MAT #558
FRONT PASSENGER MAT #557
REAR SEAT MAT #559

PART # 902415
FRONT DRIVER MAT #558
FRONT PASSENGER MAT #557

NOTES


SURFACE PREP

There is no special surface prep necessary

TOOLS



PART # 902415 2 DOOR - 2 PIECE KIT

FRONT OF VEHICLE

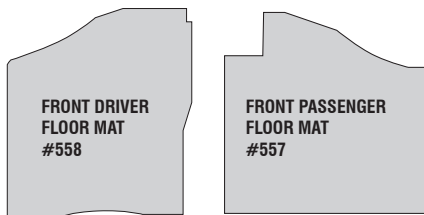

PART # 902414 4 DOOR - 3 PIECE KIT

FRONT OF VEHICLE

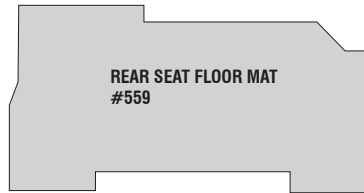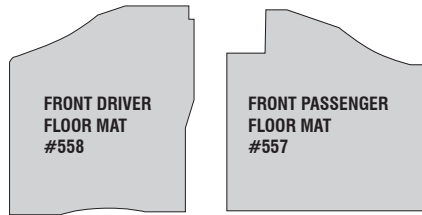

REAR OF VEHICLE

1. Clean and dry the floor area to remove mud and dirt.
2. Polaris ADV has drain plugs located on the foot wells, these can be left in or removed.
3. Locate the driver side floor mat part number 558, Passenger side mat part number 557 and rear floor mat part number 559.
4. If you have the two-door version you will only have the front mats.
5. Installation is as simple as placing the mat in place with the textured side facing up, making sure it is lying flat. The mats are made from very heavy weight rubber and will hold themselves in place.