

Installation Instructions Set # 5-3117



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673


IMPORTANT:
Coat urethane
bushing, sleeve
and arm I.D.
lightly with
supplied grease.
(All surfaces of
bushings that
contact metal)

It is recommended
that a factory
service manual be
purchased prior to
performing any
work on your car
or truck.

1. Properly support the vehicle on the frame.
2. Mark the eccentric adjusters to help get the vehicle back into alignment when done.
3. Remove the lower control arms
4. Press out the sleeve from the lower control arm. Next, press out the rubber bushing. Use extreme care to not scar the inside surface of the barrel! If you make any marks on this surface, use a piece of emery cloth to smooth out.
5. Grease the inside of the barrel and the inside and outside of the bushing. Install the bushings into the control arms. Grease and install the sleeves. NOTE: On one position (the eccentric bushing) you will need to reuse the factory sleeves.
6. Reinstall the control arms and tighten all hardware back to factory specs.
7. Tighten all fasteners. Realign the vehicle. This is very important for tire wear and safety.

Updated 15/FEB/02 BRH

17136

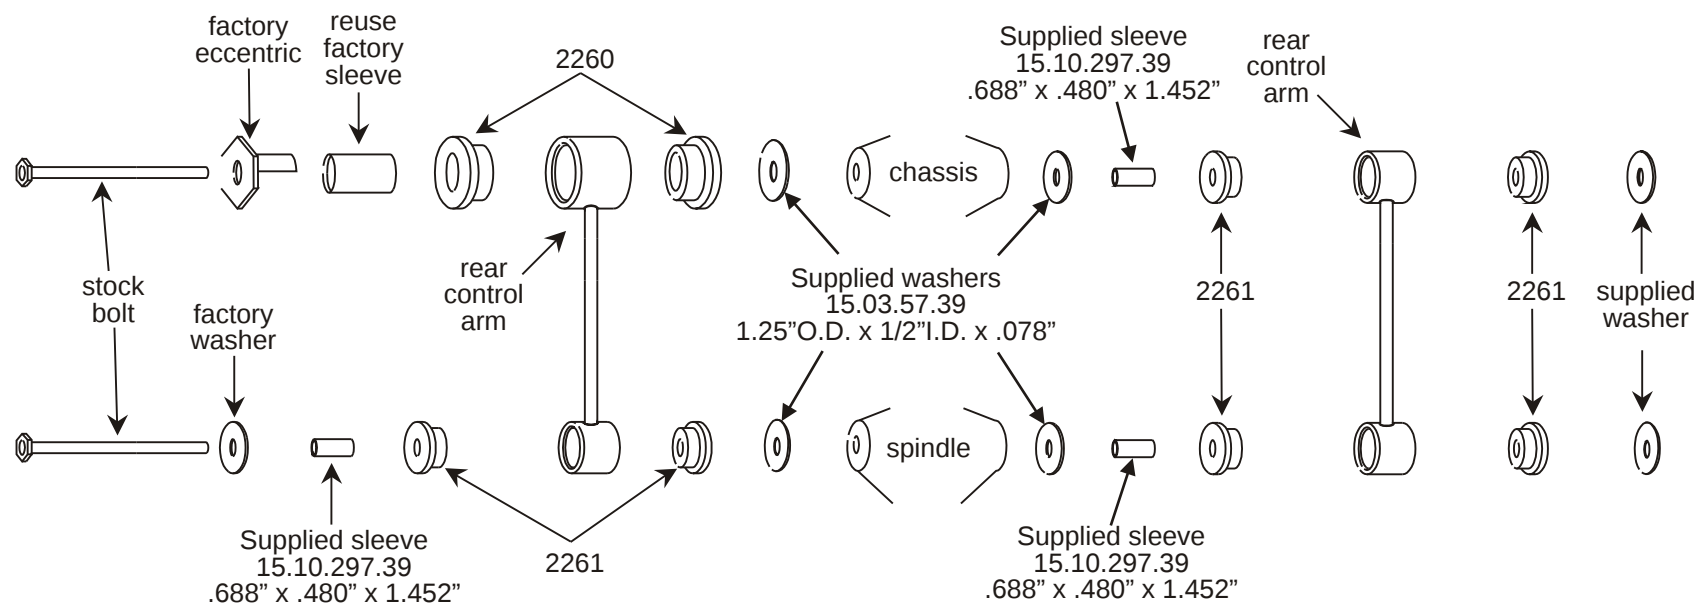

© 2002 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.