

## **A IMPORTANT**

## **READ BEFORE YOU BEGIN INSTALLATION**

IT IS CRITICAL FOR YOUR SAFETY THAT YOU CAREFULLY READ AND FOLLOW THE SAFETY CAUTIONS AND INSTALLATION INSTRUCTIONS BOTH PRIOR TO AND DURING INSTALLATION.

#### **USER SAFETY CAUTION**

During installation, be mindful of the potential for sharp edges on the product or vehicle. Taking proper safety precautions helps ensure a safe and smooth installation process.

Always wear protective gloves and handle components with care to reduce the risk of injury.



#### **TEMPERATURE SURFACE CAUTION**


During high temperatures or extended sun exposure, surfaces of this product may become hot to the touch, posing a risk of burns or injury. Use caution when handling the product in hot weather and allow time for it to cool before contact.





#### **FASTENER TORQUE CAUTION**


All fasteners must be tightened to the specified torque values provided in the installation instructions to ensure proper fit and safe operation of the tonneau cover. Under- or over-tightening can lead to product failure, potential damage to your vehicle, injury, or safety hazards while driving.





#### **PINCH POINT SAFETY CAUTION**

This tonneau cover may create pinch points when closing or operating near solid surfaces such as the truck bed rails or tailgate. To prevent injury, keep hands, fingers, and other body parts clear of moving parts during operation.







## **A IMPORTANT**

## **READ BEFORE YOU BEGIN INSTALLATION**

IT IS CRITICAL FOR YOUR SAFETY THAT YOU CAREFULLY READ AND FOLLOW THE SAFETY CAUTIONS AND INSTALLATION INSTRUCTIONS BOTH PRIOR TO AND DURING INSTALLATION.

#### **ENTRAPMENT SAFETY WARNING**

This tonneau cover does not feature a manual release mechanism from inside the truck bed. To prevent the risk of entrapment, never allow anyone to be inside the bed of the truck when the cover is closed.

Always ensure the area is clear before closing the cover, and keep the cover securely latched when not in use to avoid accidental closure.



#### **CARGO TRANSPORT WARNING**

Do not attempt to close the tonneau cover over cargo that is taller than the depth of the truck bed.

Never force the cover to close improperly.

#### Forcing the cover can:

- Prevent the cover from lying flat and latching securely.
- Damage the cover's hinge and cause the cover to kink.
- Damage the rear tail panel and cause it to become detached.





# **READ THIS FIRST**



# ENDURE ALX INSTALLATION SUPPLEMENT

Nissan, Toyota, Honda, Ram, Jeep, GM CarbonPro bed & Ford

This supplement replaces **steps 3-7** in the main install sheet for the vehicles listed below. Read this guide before proceeding with the main installation.

Nissan Titan 2016+ W/O Utili-Track System, Isuzu D-Max 2020, Nissan Navara 2015-2020

and Toyota Hilux 2005-2015 WITHOUT the Utili-Track System	1
Nissan Titan 2016+ WITH the Utili-Track System	2
Toyota Tacoma 2016+	3
Toyota Tundra 2016+	4
Honda Ridgeline 2017+	5-6
RamBox DT 2019+	7-8
Jeep Gladiator	9-12
GM CarbonPro Bed	13-14
Ford Ranger 2024-2025	15-17
Ford Ranger 2026+	18-20








## **INSTALLATION SUPPLEMENT**


This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

Nissan Titan 2016+ W/O Utili-Track System, Isuzu D-Max 2020, Nissan Navara 2015-2020 and Toyota Hilux 2005-2015 WITHOUT the Utili-Track System

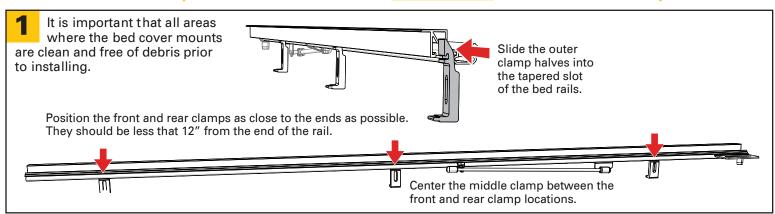

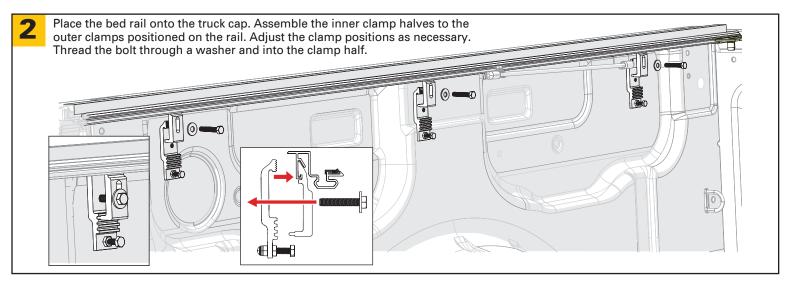

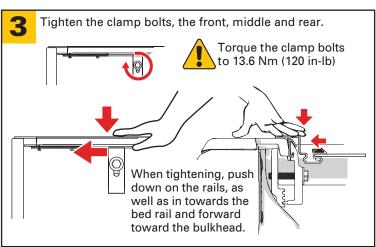

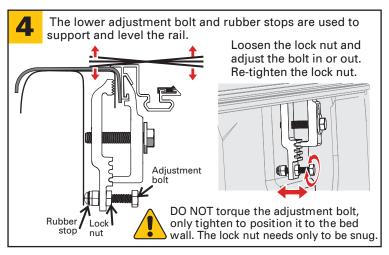






## **INSTALLATION SUPPLEMENT**


This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

## Nissan Titan 2016+ WITH the Utili-Track System

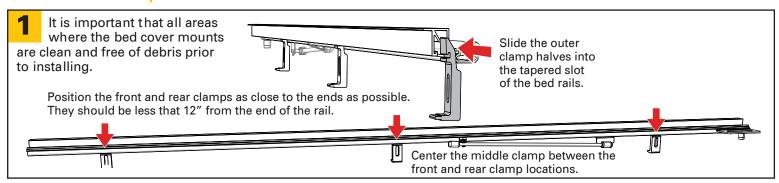

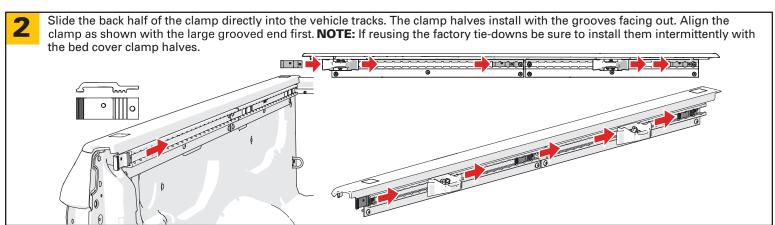

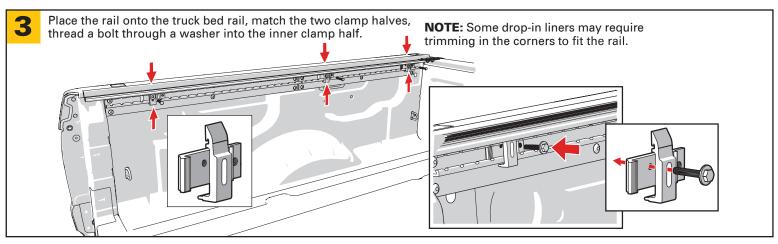

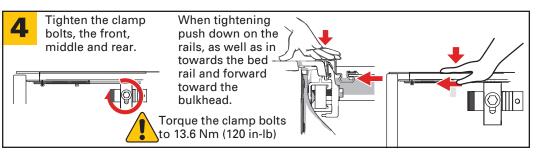




## INSTALLATION SUPPLEMENT


This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


## Toyota Tacoma 2016+


It is important that all areas where the bed cover mounts are clean and free of debris prior to installing.


Remove the factory cab header rail. Remove the backing from the foam seals, and adhere a seal to both sides of the header rail. Reassemble the header rail to the truck, tighten the fasteners to 7.5Nm, (66.5 in-lb)

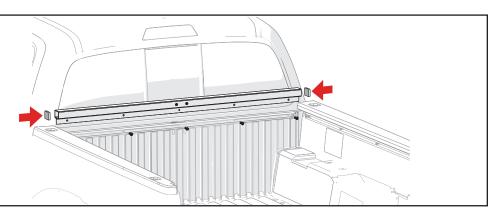


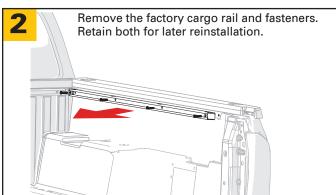


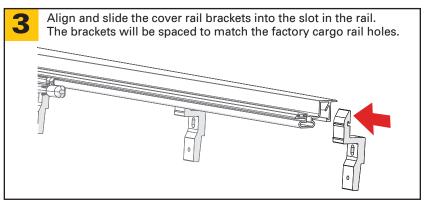

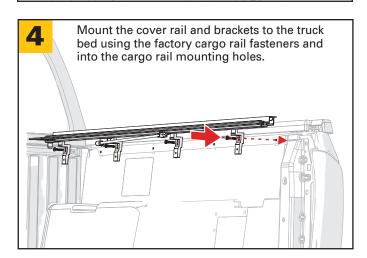

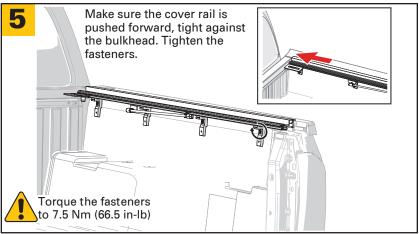

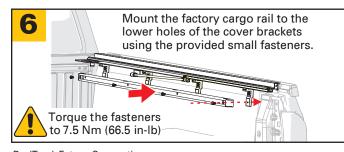

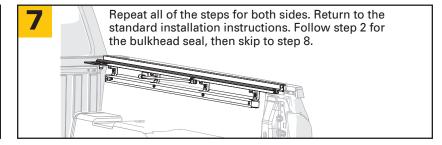




## **INSTALLATION SUPPLEMENT**


This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


## Toyota Tundra 2016+

It is important that all areas where the bed cover mounts are clean and free of debris prior to installing.


Remove the factory cargo rails and fasteners. Retain both for later reinstallation.

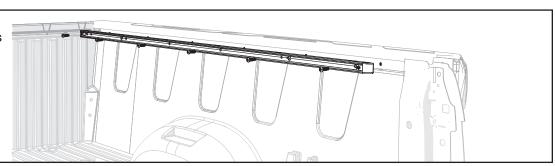


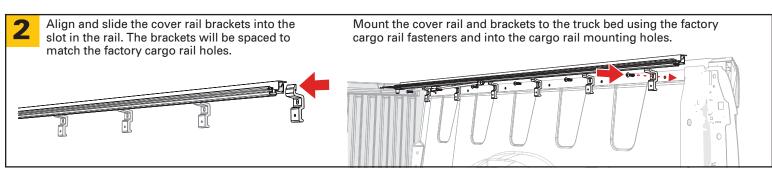

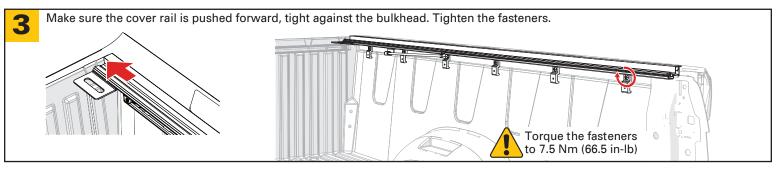

Mount the factory cargo rail to the lower holes of the cover brackets using the provided small fasteners.

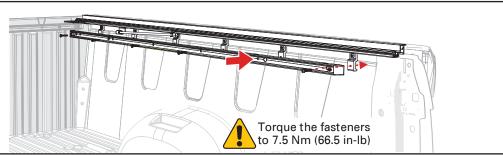

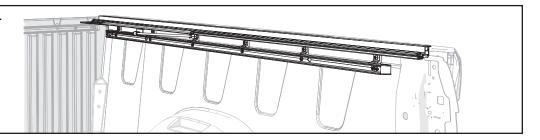






## **INSTALLATION SUPPLEMENT**


This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


## Honda Ridgeline 2017+ Page 1 of 2

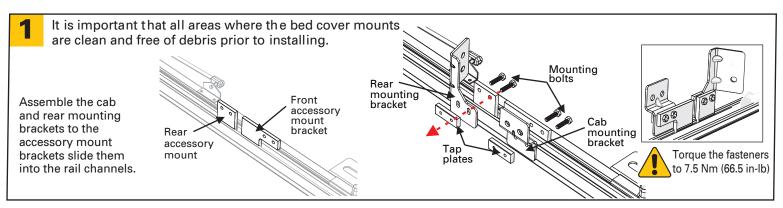

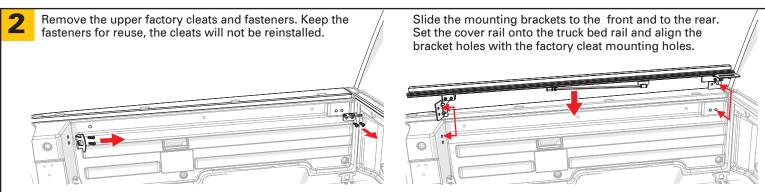

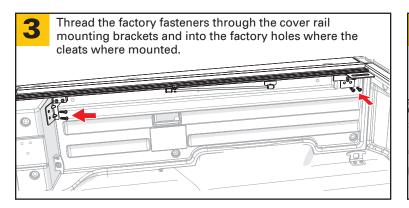

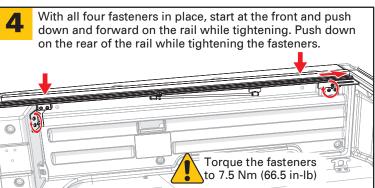

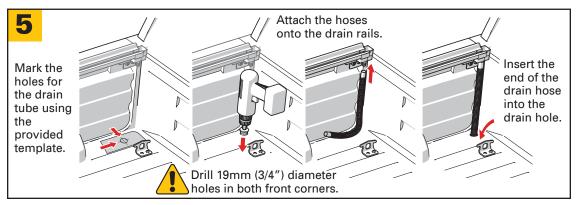




## **INSTALLATION SUPPLEMENT**

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

Honda Ridgeline 2017+ Page 2 of 2

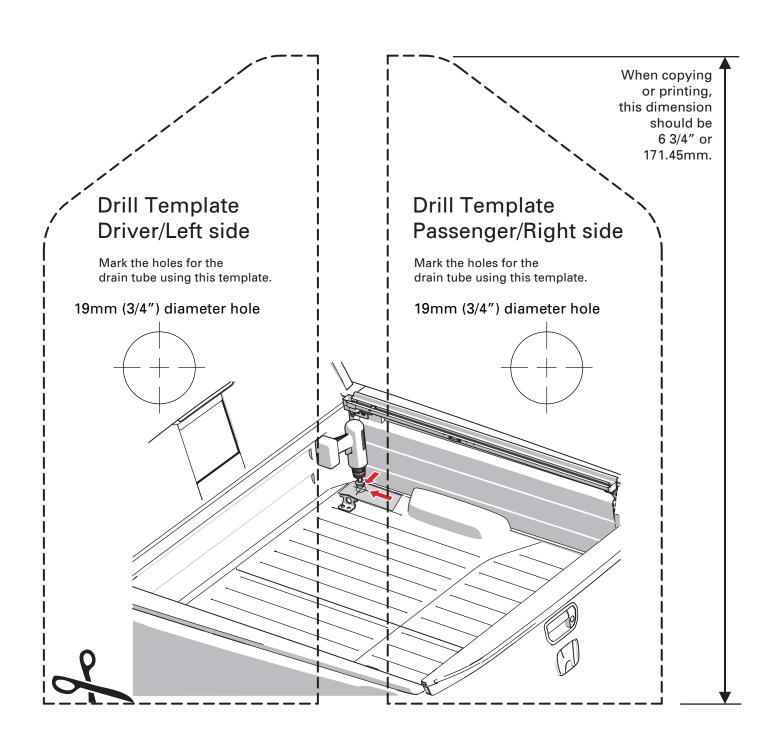






## INSTALLATION SUPPLEMENT


This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


## RamBox DT 2019+ Page 1 of 2

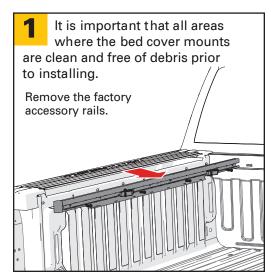

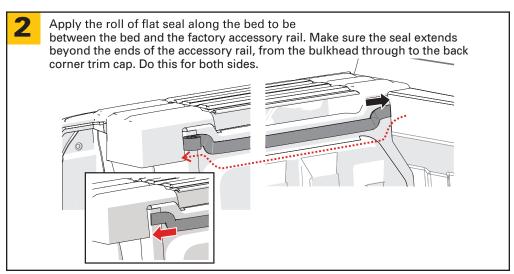

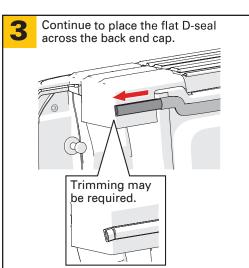

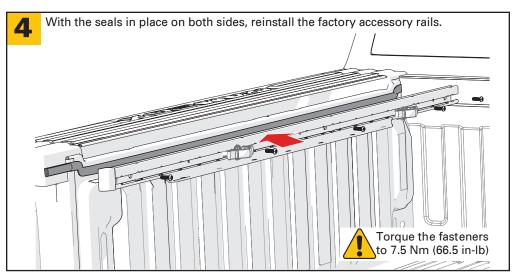

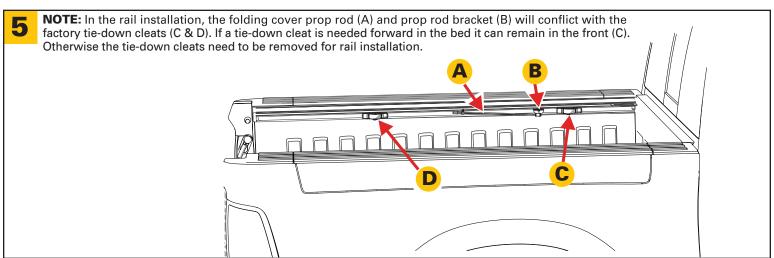





## **INSTALLATION SUPPLEMENT**


This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


## RamBox DT 2019+ Page 2 of 2



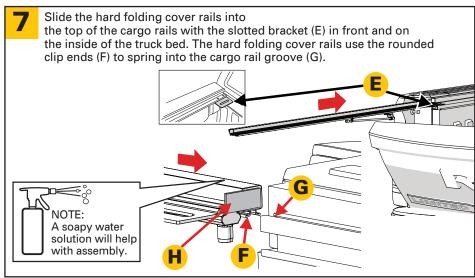

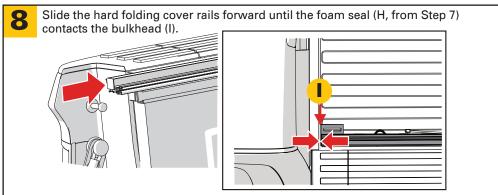

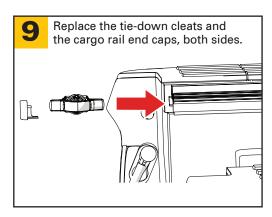

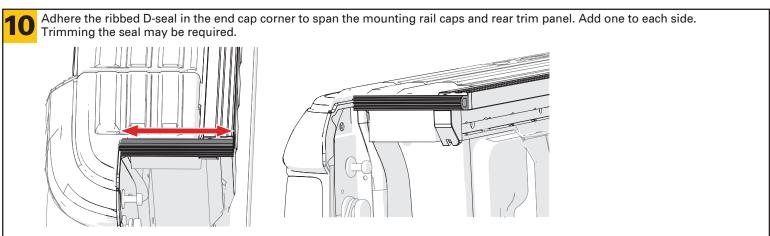




## **INSTALLATION SUPPLEMENT**

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

## Jeep Gladiator Page 1 of 4

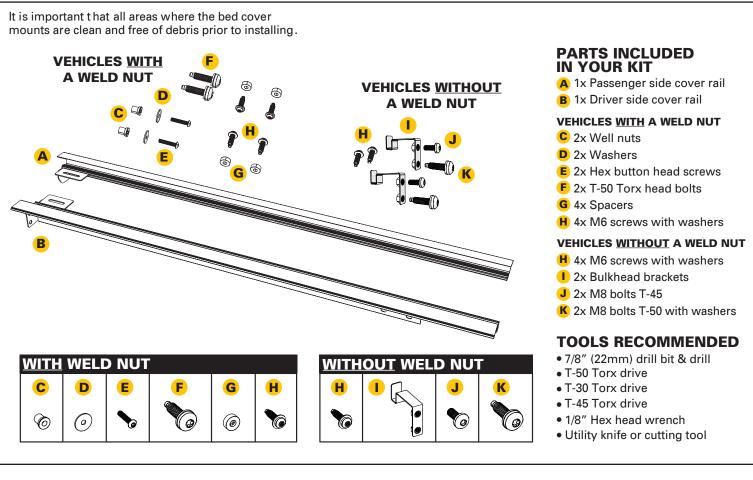


### Drop-in Liner Trimming

If the truck has a drop-in bedliner, the top corners at the bulkhead, and the top corners of the tailgate liner need to be trimmed to allow for the bed cover rails.

**CAUTION:** Move the bedliner away from the truck sheet metal, or remove the liner from the truck so that the truck bed is not damaged.

Locate the necessary cuts by starting with the top left corner edge of the liner 1, then measure a distance of 0.18", 4.8mm, outwards to establish point **A.** The first cut is down from **A** 2.5", 63.5mm, to point **B.** The next cut is from point **A**, inwards. horizontally 2.6", 66.7mm, to point **C.** Cut from point **C** to **D**, then finish with a cut from **B** to **D**.

The cut is done on the passenger side as a mirror image, Figure 2.

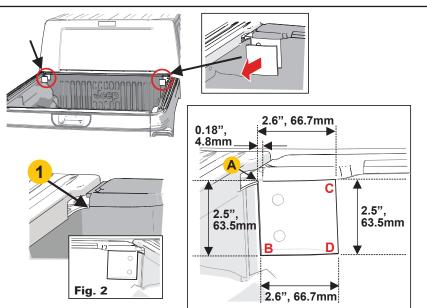




## **INSTALLATION SUPPLEMENT**

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


## Jeep Gladiator Page 2 of 4

Locate the necessary cuts for the tailgate liner by starting with the outside corner of the liner, measure a distance of 0.375", 9.5mm inward, then 0.875", 22.2mm, down. The cut is done on both sides, as a mirror image.

**CAUTION:** Move the tailgate liner away from the truck sheet metal, or remove the liner from the truck so that the truck bed is not damaged.

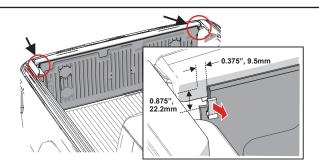



Holes are necessary in the drop-in bedliner for the bed cover rail drain tubes. A 7/8",[0.875", (22mm)], diameter hole needs to be centered on the first rib from the edge. The hole will be 2.875", 73mm, up from the floor The hole is cut on both sides, as a mirror image.

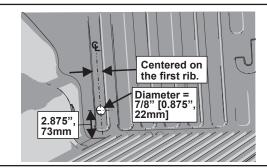


If the bed rail caps are not trimmed at the tailgate section, cut using the scribed lines as a guide to expose the area shown. Perform this operation on both sides of the pickup box.

**NOTE:** It is important that all areas where the bed cover mounts are clean and free of debris prior to installing.

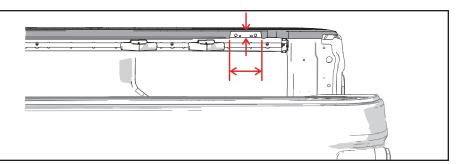

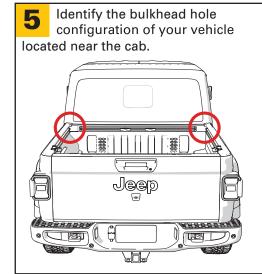

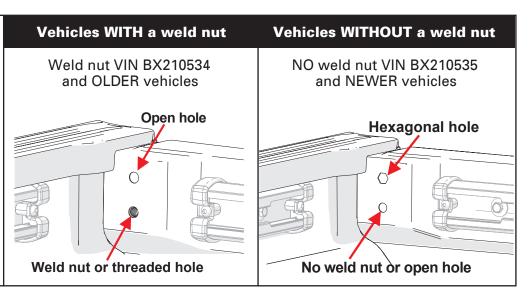






## INSTALLATION SUPPLEMENT


This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


## Jeep Gladiator Page 3 of 4

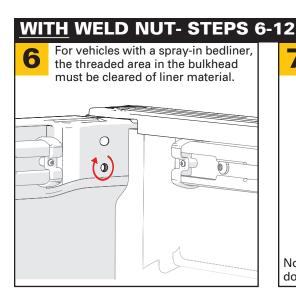


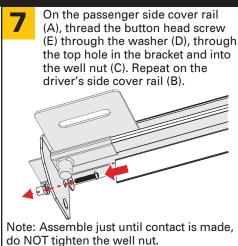


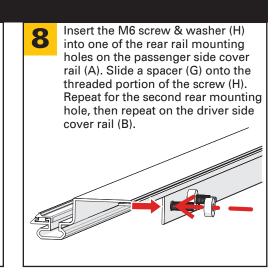

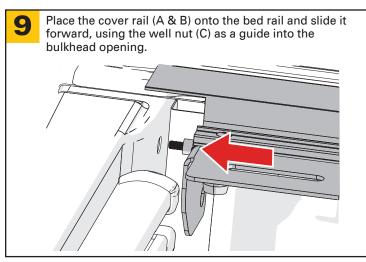

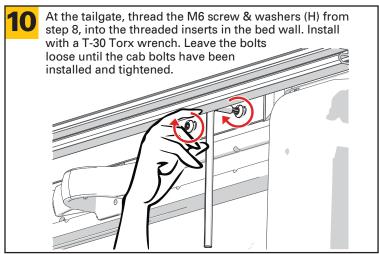

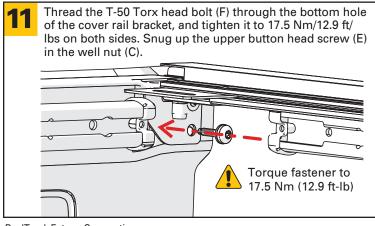

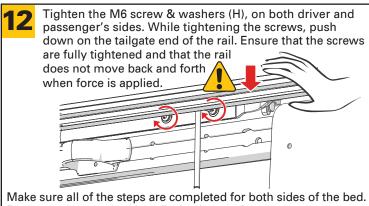


Return to the standard installation instructions.





## INSTALLATION SUPPLEMENT


This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


## Jeep Gladiator Page 4 of 4

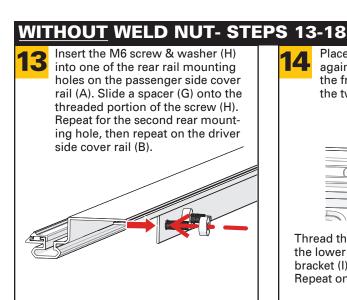


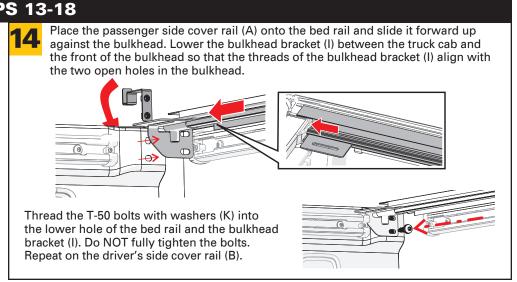

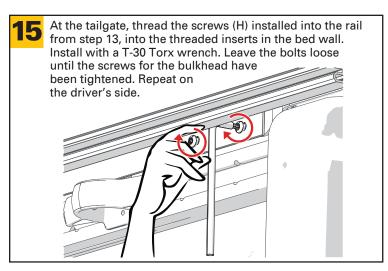

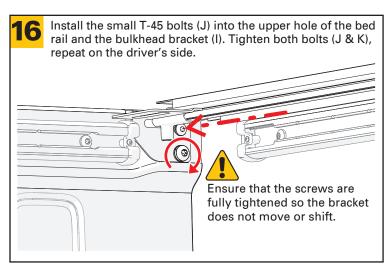

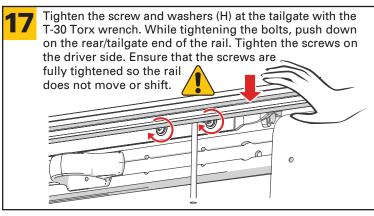

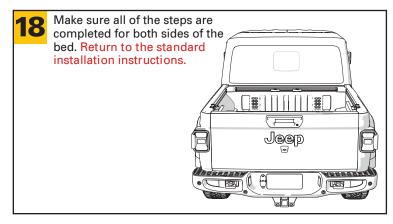






## **INSTALLATION SUPPLEMENT**

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

## GM CarbonPro bed Page 1 of 2

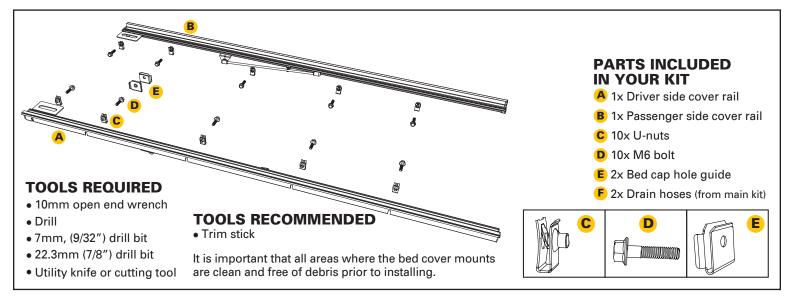

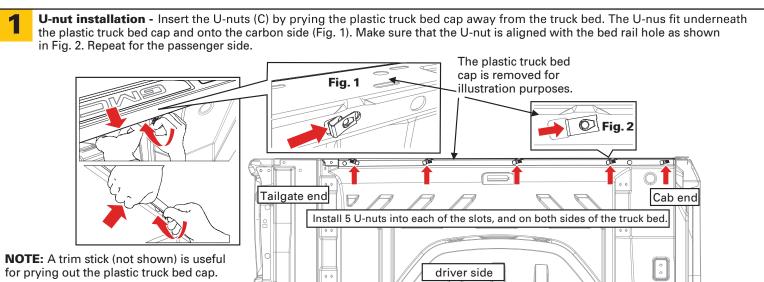

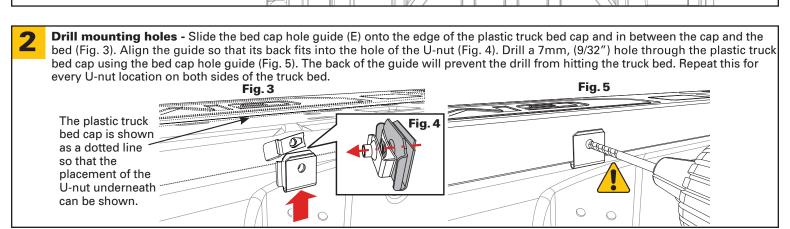





## **INSTALLATION SUPPLEMENT**

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

## GM CarbonPro bed Page 2 of 2

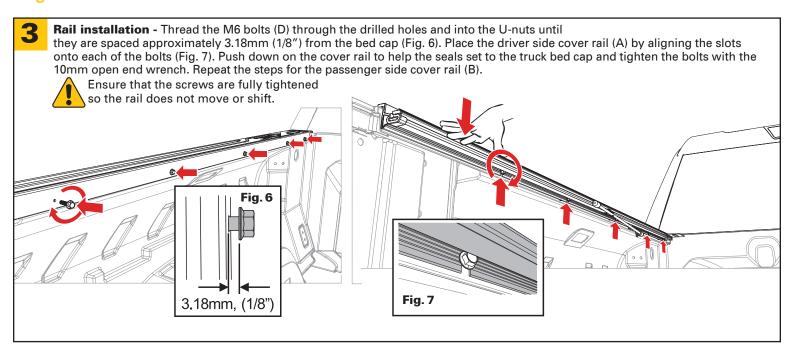

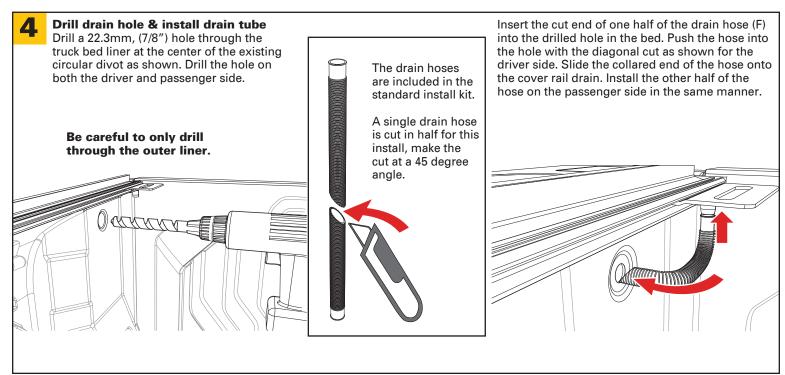



## **INSTALLATION SUPPLEMENT**

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


## Ford Ranger 2024-2025 Page 1 of 3


#### PARTS INCLUDED IN YOUR KIT


- A 2x Female Buckle
- **B** 1x Clamp Pack (6 clamps)
- C 2x Drain Tube Bed Plugs

#### **TOOLS RECOMMENDED**

- · Scissors or utility knife
- T30 Torx screwdriver or bit
- · Isopropyl alcohol

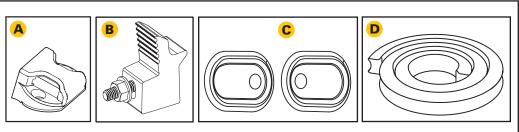

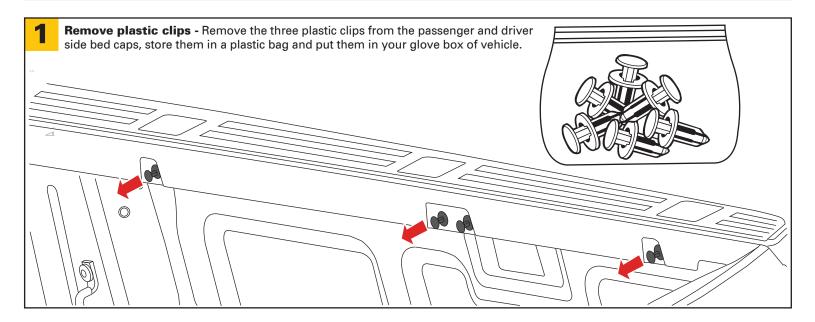

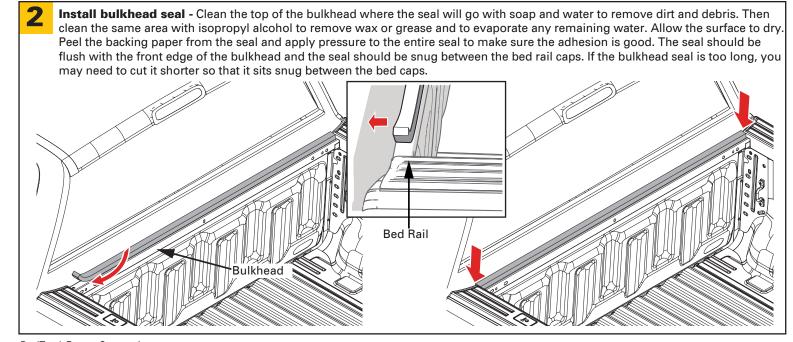






## INSTALLATION SUPPLEMENT

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

## Ford Ranger 2024-2025 Page 2 of 3

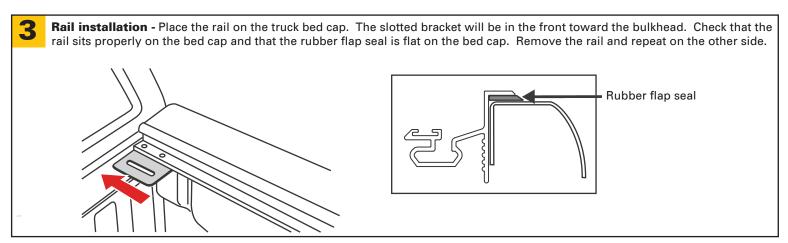

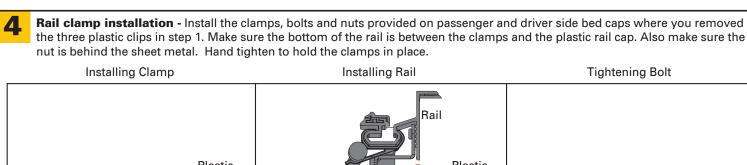

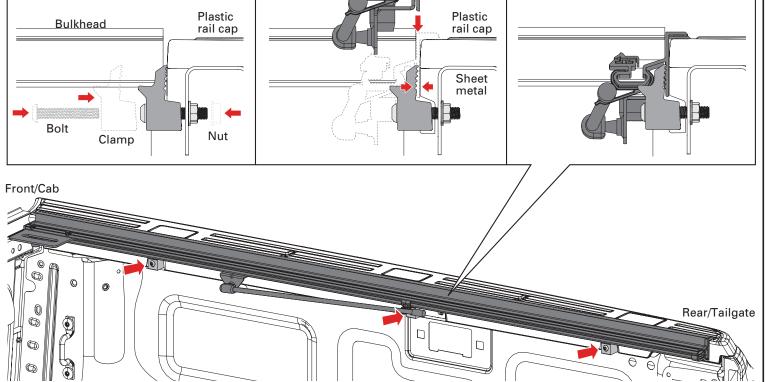




## INSTALLATION SUPPLEMENT

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

## Ford Ranger 2024-2025 Page 3 of 3

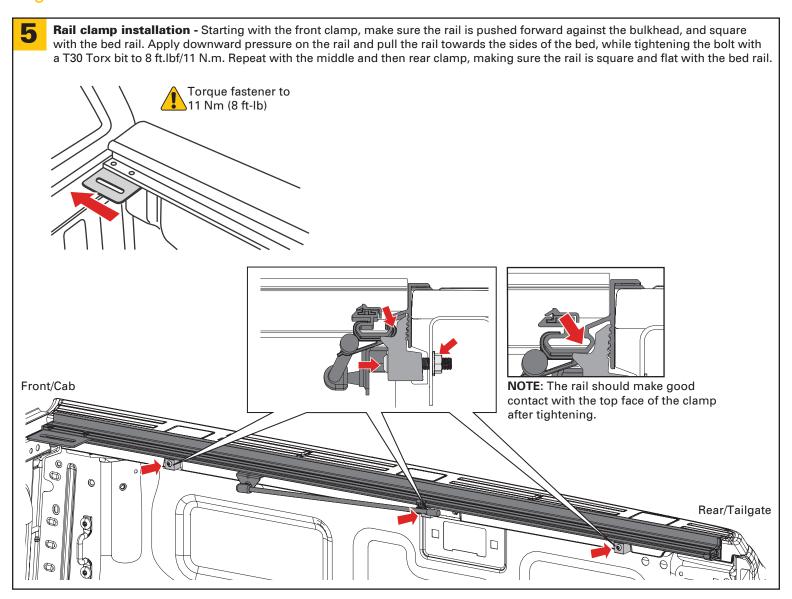

6

Repeat all of the steps for both sides. Return to standard installation instructions, step 7.



## **INSTALLATION SUPPLEMENT**

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


## Ford Ranger 2026+ Page 1 of 3


## PARTS INCLUDED IN YOUR KIT


- A 2x Female Buckle
- B 1x Clamp Pack (6 clamps)
- C 2x Drain Tube Bed Plugs
- 1x Bulkhead Seal

#### **TOOLS RECOMMENDED**

- · Scissors or utility knife
- T30 Torx screwdriver or bit
- Isopropyl alcohol

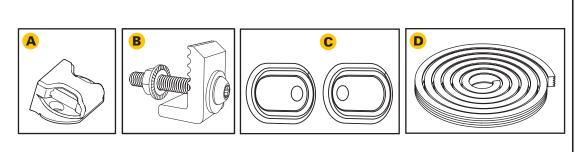

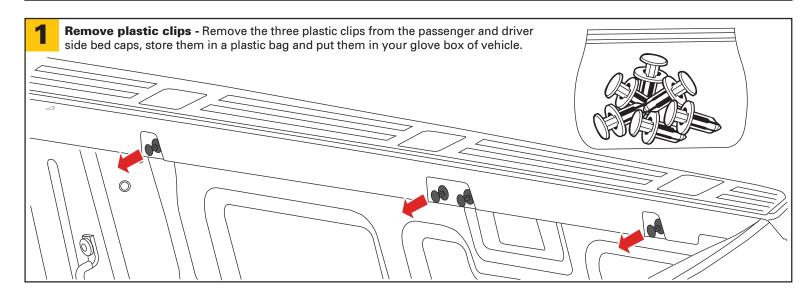

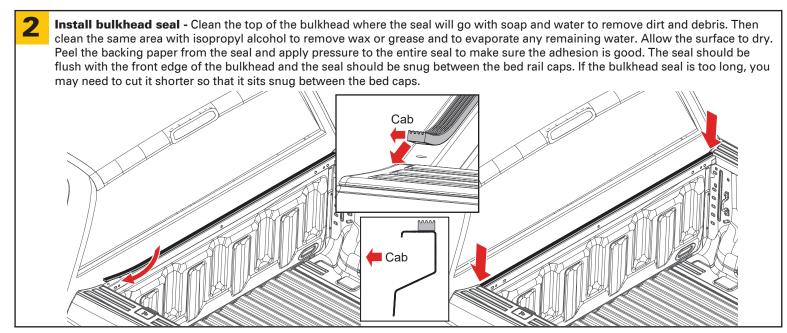





## **INSTALLATION SUPPLEMENT**

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

## Ford Ranger 2026+ Page 2 of 3

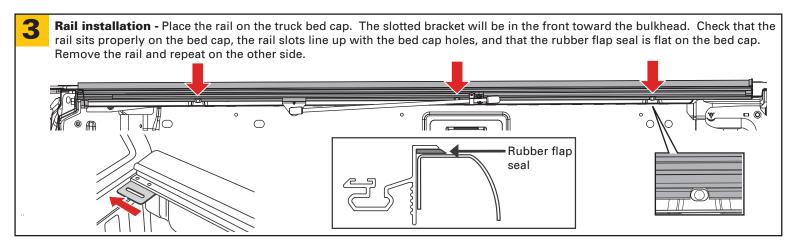

Rail clamp installation - Install the bolts, washers, clamps, and nuts provided on the passenger and driver side bed caps where you removed the three plastic clips in step 1. Ensure that the clamp fingers mate properly to the rail, and that the bottom leg of the clamp seats properly to the bed plastic. Also make sure the nut is behind the sheet metal. Hand tighten to hold the clamps in place.

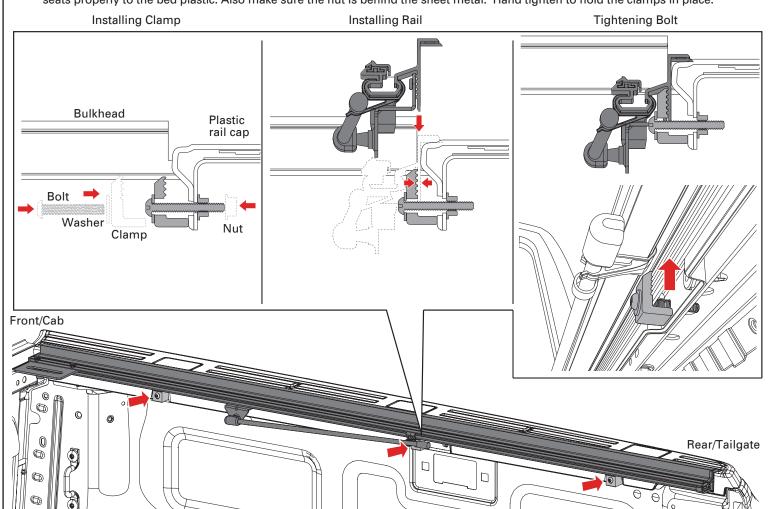




## **INSTALLATION SUPPLEMENT**

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

## Ford Ranger 2026+ Page 3 of 3

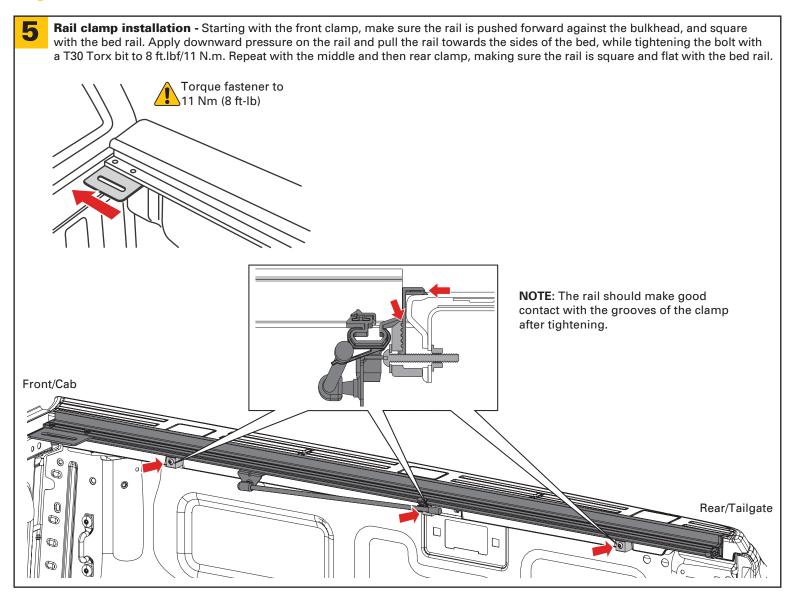

6

Repeat all of the steps for both sides. Return to standard installation instructions, step 7.