


INSTALLATION GUIDE Bracket Kit-'24 ALX Tacoma

Install before bed cover





3 1 0 0 0 1 3 2

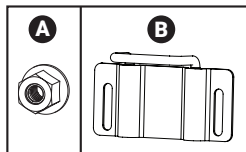

PARTS INCLUDED IN YOUR KIT

- A** 4x Flange nuts
- B** 2x Striker brackets
- C** 1x Driver tail latch bracket
- D** 1x Passenger tail latch bracket

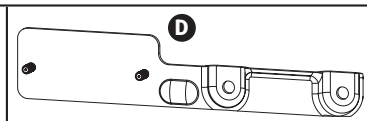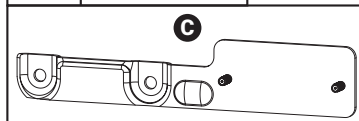


Components A, B, C come pre-assembled and A, B, D come pre-assembled


TOOLS REQUIRED

- 10mm Wrench or socket
- 13mm Wrench or socket

- 1** Remove the factory bolts as shown. **Do not discard bolts.** Repeat on other side.

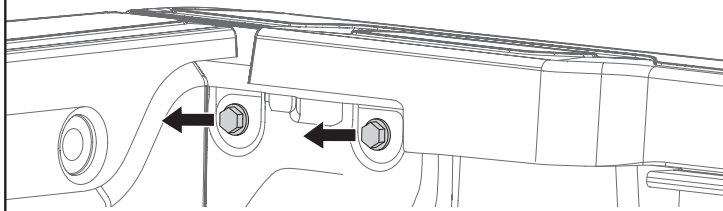

- 2** The brackets are assemblies comprised of the striker bracket (B) and a driver tail latch bracket (C). Align the two holes in the driver tail latch bracket (C) with the two holes you removed the bolts from in step 1. Repeat on the opposite side of the truck bed with striker bracket (B) and passenger tail latch bracket (D).

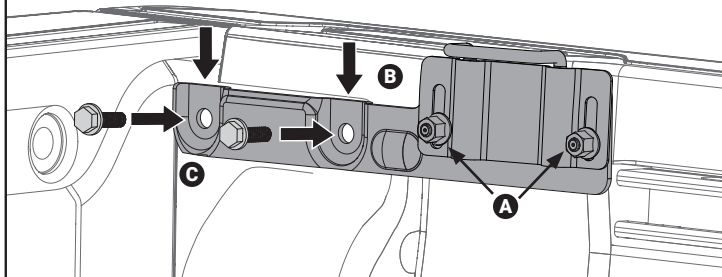

- 3** Tighten both bolts using a 10mm wrench or socket to 8ft/lbs (11Nm).

