FOR RACING USE ONLY

These instructions are intended for the following part numbers:
2660-15340



AIRGATE™ CARBON INTAKE INSTALLATION GUIDE:

Vehicle Fitment:

- 2015-2016 Audi A3 2.0T
- 2020 Audi S3
- 2016-2018 Audi TT
- 2016-2018 Audi TT Roadster
- 2015-2020 VW GTI 2.0T
- 2015-2018 VW Golf 1.8T
- 2015-2018 VW Golf Sportwagen 1.8T
- 2017-2018 VW Golf Alltrack
- 2019-2020 VW Jetta GLI

Thank you for purchasing the **AWE AirGate™ Carbon Intake** system.

Exquisite build quality with industry leading performance distinguish this intake kit from all others.

Installation questions?
CONTACT US

Copyright 2018, AWE. No part of this document may be reused or duplicated without the express permission of AWE Secor Ltd. All rights reserved. Rev-2.6

PARTS LIST

INSPECT ALL PARTS PRIOR TO DISASSEMBLY OF VEHICLE; IF DAMAGED OR MISSING, PLEASE CONTACT THE PLACE OF PURCHASE IMMEDIATELY.

AirGate™ Carbon Intake:

1 AirGate™ Carbon Air Box
1 High flow air filter
3 Mounting grommets
1 70-90mm hose clamp
1 Breather filter (*sold separately*)

AirGate™ Lid (optional):

1 AirGate™ Lid
3 M5 washers
3 M5 x20mm screws

Required Tools:

T-25 Torx
Phillips head screwdriver
Hose clamp removal tool

STEP 1

Remove the two (2) T-25 torx screws at arrows in **Figure 1** and remove the upper half of the plastic inlet duct.

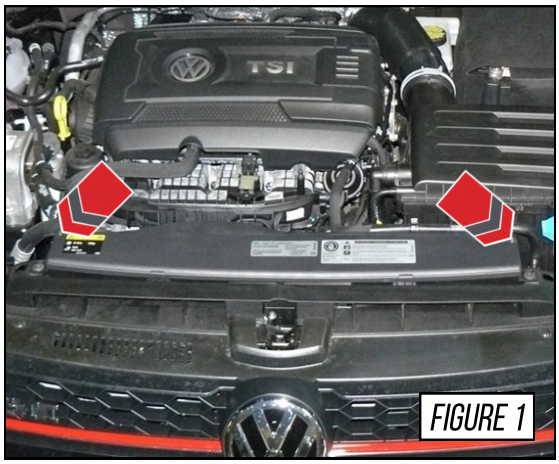

FIGURE 1

STEP 2

Unclip the hose, at arrow in **Figure 2**, and remove the lower half of the plastic inlet duct.

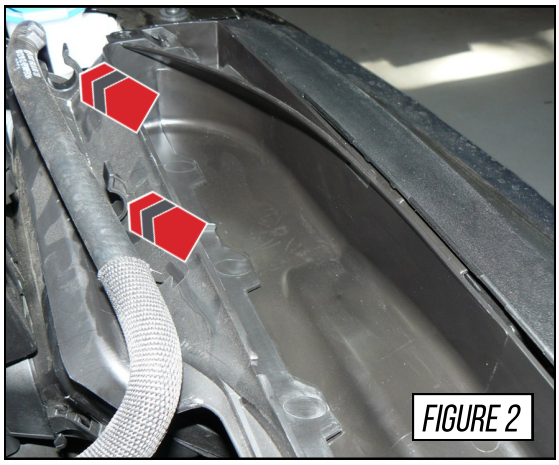
FIGURE 2

Copyright 2018, AWE. No part of this document may be reused or duplicated without the express permission of AWE Secor Ltd. All rights reserved. Rev-2.6

STEP 3

Remove hose at **Arrow A** in **Figure 3**.

For secondary air pump equipped cars:

Look for the hose that is shown by **Arrow B** in **Figure 3**; if it is there, separate from the factory intake box.

If this hose is present, an AWE Breather Filter (*sold separately*) will be required. See *Step 6*.

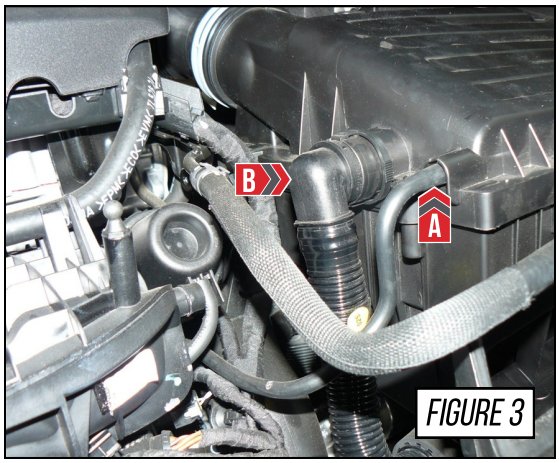

FIGURE 3

STEP 4

Loosen the hose clamp from the factory intake tube, as shown at the arrow in **Figure 4**.

Separate the intake hose from the factory intake box.

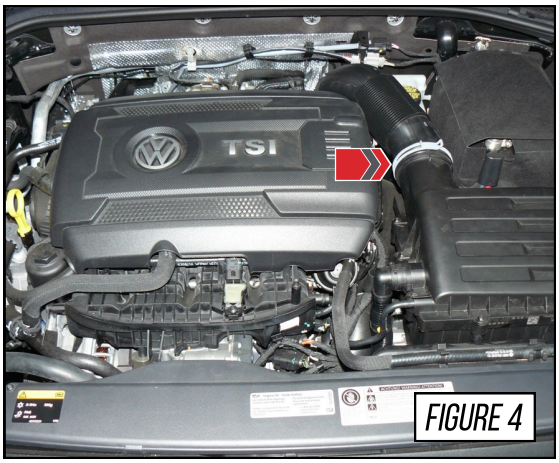

FIGURE 4

STEP 5

Pull straight up on the factory intake to pop it loose from the three pins holding it in place, shown at arrows in **Figure 5**.

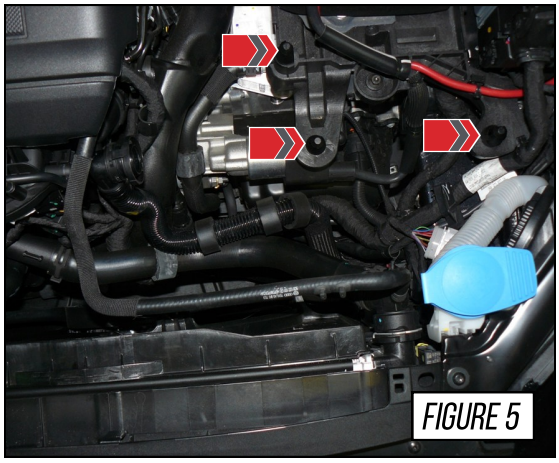
FIGURE 5

Copyright 2018, AWE. No part of this document may be reused or duplicated without the express permission of AWE Secor Ltd. All rights reserved. Rev-2.6

STEP 6

For secondary air pump equipped cars:

Install the AWE Breather Filter, sold separately, to the secondary air pump intake hose, at **Arrow A** in **Figure 6**. Next, zip tie the hose to an intake mount, as shown at **Arrow B** in **Figure 6**.

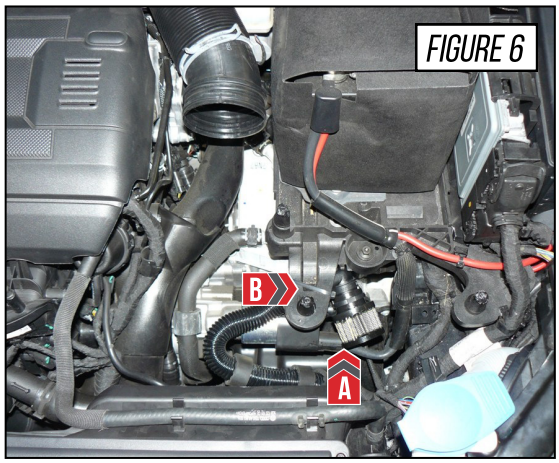

FIGURE 6

STEP 7

Install the supplied rubber grommets into the bottom of the AirGate™ Carbon Air Box, shown by **Arrows A** in **Figure 7**.

Orient and secure the filter onto the neck with the included hose clamp, as shown by **Arrow B** in **Figure 7**.

NOTE: If the AWE AirGate™ Lid has been purchased, it should be installed before the next step.



FIGURE 7

STEP 8

Place the AirGate™ Intake assembly over the 3 pins that locate the box in the engine bay.

Gently and firmly push down on the sides of the box until it is firmly located on the pins.

Install the turbo inlet tube at the back of the carbon intake and secure with the factory clamp, as shown by the arrow in **Figure 8.**

CAUTION: Do not press down on the top center of the box. Reaching into box from the inlet, it is possible to press on the bottom of the box.

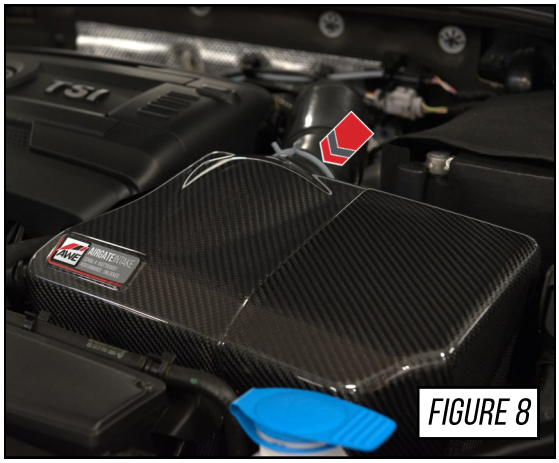
FIGURE 8

Copyright 2018, AWE. No part of this document may be reused or duplicated without the express permission of AWE Secor Ltd. All rights reserved. Rev-2.6

STEP 9

Re-attach the rubber vacuum tube to the nipple on the AWE AirGate™ Intake tube, shown at the arrow in **Figure 9**.

Re-install the plastic inlet ducts that were removed in *Steps 1 and 2*.

Installation is complete!

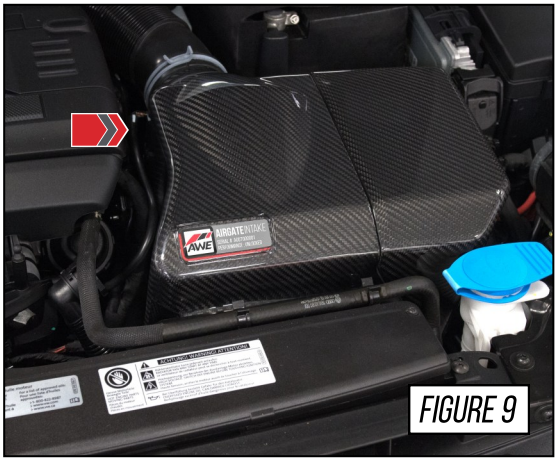

FIGURE 9

About the AirGate™ Lid:

Removing this panel will increase the presence of intake sounds that resonate from the turbo under boost.

Installing this panel shields the intake and filter from the higher air temperatures that are present in the engine bay while reducing the sounds that come from the intake.

Remove this panel to access and remove the performance air filter for inspection and/or cleaning.

ENJOY!

Copyright 2018, AWE. No part of this document may be reused or duplicated without the express permission of AWE Secor Ltd. All rights reserved. Rev-2.6

CARE

This is a re-usable air filter that can be cleaned when dirty and put back into service.
Please inspect the air filter element every 25,000 miles for integrity.
Clean every 50,000 miles under normal operating conditions, sooner in dusty conditions.
Contact AWE to purchase a filter maintenance kit. Under heat, carbon fiber may mature to present a gold hue - this is a normal reaction to spirited driving.

Any questions or comments,
please do not hesitate to contact us:

AWE
199 Precision Drive
Horsham, PA 19044

215-658-1670
CONTACT FORM

WARRANTY

Up-to-date warranty information is found **HERE**.

Copyright 2018, AWE. No part of this document may be reused or duplicated without the express permission of AWE Secor Ltd. All rights reserved. Rev-2.6