




## INSTALLATION INSTRUCTIONS

MAKE: Lexus  
MODEL: GX550  
YEAR: 2024-2026  
ENGINE: V6-3.4L (tt)

Axle-Back Exhaust

49-36086

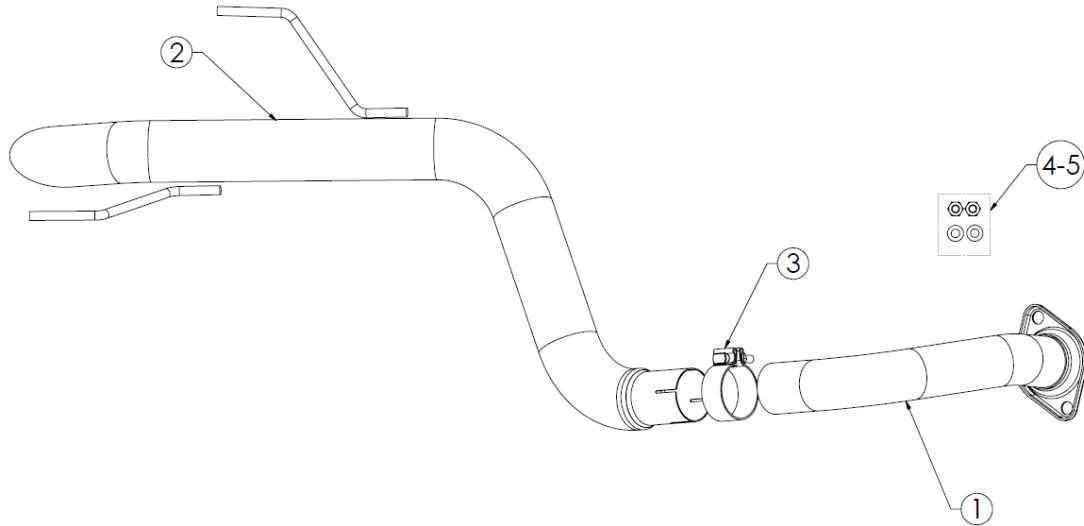

Item	Description	Part Number	Quantity
1	S/A AB Over Axle	05-244647	1
2	S/A Tailpipe Hi-Tuck	05-244648	1
3	Clamp, Band: 2 1/2"	05-41061	1
4	Nut, M10 X 1.25	03-50400	2
5	Washer, 3/8" ID, 1" OD, .100 THK S/S	03-50637	2

**aFe POWER recommends professional installation on this product.** Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.





## INSTALLATION INSTRUCTIONS

Axle-Back Exhaust

49-36086

**MAKE:** Lexus  
**MODEL:** GX550  
**YEAR:** 2024-2026  
**ENGINE:** V6-3.4L (tt)

---

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Lift the vehicle and secure on a vehicle lift or jack stands.
5. Secure the stock exhaust with jack/stands.
6. Remove the bolts and springs at the over axle of the vehicle's exhaust. Retain the hardware, it will be re-used for installation of the aFe POWER exhaust.
7. Remove the OE exhaust hangers from the isolators. Be careful to not damage the isolators and remove Axle back O.E Exhaust.
8. Install the Over axle pipe assembly onto the O.E muffler Assy using O.E hardware and Provided Nuts and washers.
9. Install the tail-pipe assembly with the supplied 3" band clamp and install the hanger into the vehicle's isolator mount.
10. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
11. Start from the front of the aFe exhaust system and evenly tighten all clamps and fasteners.
12. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
13. Lower the vehicle back to the ground and secure the spare tire.
14. It is recommended to re-tighten all clamps and hardware after 50-100 miles.