



FEL-PRO INSTALLATION TIPS


Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing products is better than the quality of its installation.

VALVE COVER GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser

CHECK COVER FLANGES for flatness. Straighten stamped metal pans. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

ATTACH AND ALIGN GASKET: Apply a quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs adhesive in not required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

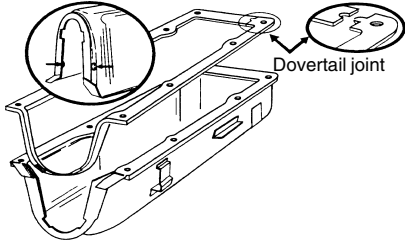

REINSTALL COVER TO ENGINE. Press down firmly.

INSTALL AND TIGHTEN ALL CAP SCREWS in side rails and rear end. Securely tighten cap screws at "A" present.

CAUTION: Over-torquing can distort cover and cause leakage.

START CAP SCREWS. If 2 slotted holes are present (see "A" in drawing) do not tighten down.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.

© 2000 Federal-Mogul Corporation
Form No. I-478 (Rev. 9/00)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS


Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing products is better than the quality of its installation.

VALVE COVER GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser

CHECK COVER FLANGES for flatness. Straighten stamped metal pans. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

ATTACH AND ALIGN GASKET: Apply a quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs adhesive in not required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

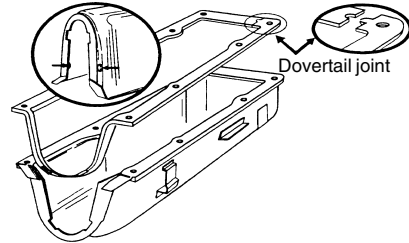

REINSTALL COVER TO ENGINE. Press down firmly.

INSTALL AND TIGHTEN ALL CAP SCREWS in side rails and rear end. Securely tighten cap screws at "A" present.

CAUTION: Over-torquing can distort cover and cause leakage.

START CAP SCREWS. If 2 slotted holes are present (see "A" in drawing) do not tighten down.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.

© 2000 Federal-Mogul Corporation
Form No. I-478 (Rev. 9/00)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS


Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing products is better than the quality of its installation.

VALVE COVER GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser

CHECK COVER FLANGES for flatness. Straighten stamped metal pans. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

ATTACH AND ALIGN GASKET: Apply a quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs adhesive in not required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

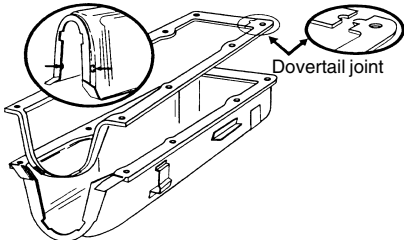

REINSTALL COVER TO ENGINE. Press down firmly.

INSTALL AND TIGHTEN ALL CAP SCREWS in side rails and rear end. Securely tighten cap screws at "A" present.

CAUTION: Over-torquing can distort cover and cause leakage.

START CAP SCREWS. If 2 slotted holes are present (see "A" in drawing) do not tighten down.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.

© 2000 Federal-Mogul Corporation
Form No. I-478 (Rev. 9/00)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS


Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing products is better than the quality of its installation.

VALVE COVER GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser

CHECK COVER FLANGES for flatness. Straighten stamped metal pans. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

ATTACH AND ALIGN GASKET: Apply a quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs adhesive in not required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

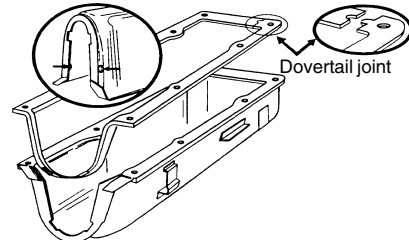

REINSTALL COVER TO ENGINE. Press down firmly.

INSTALL AND TIGHTEN ALL CAP SCREWS in side rails and rear end. Securely tighten cap screws at "A" present.

CAUTION: Over-torquing can distort cover and cause leakage.

START CAP SCREWS. If 2 slotted holes are present (see "A" in drawing) do not tighten down.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.

© 2000 Federal-Mogul Corporation
Form No. I-478 (Rev. 9/00)

Printed in U.S.A.