



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

VALVE COVER GASKET

WHEN HIGH TEMPERATURE GASKET IS REQUIRED


The valve cover gasket in this set is constructed of a rubber coated, exceptionally heat resistant fiber.

It meets or exceeds OEM specifications for superior performance where extreme heat is encountered. Other brands of gaskets, labeled "high temperature" but not constructed of this superior material, may not withstand extreme heat.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

-Continued-

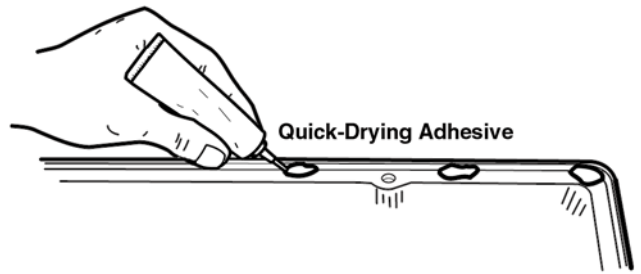

ATTACH AND ALIGN GASKET. Apply quick-drying adhesive, sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

REINSTALL COVER TO ENGINE. Torque securely to 90 in. lbs. Over-torquing can distort cover and cause leakage.

© 2001 Federal-Mogul Corporation
Form No. I-610 (Rev. 6/01)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

VALVE COVER GASKET

WHEN HIGH TEMPERATURE GASKET IS REQUIRED


The valve cover gasket in this set is constructed of a rubber coated, exceptionally heat resistant fiber.

It meets or exceeds OEM specifications for superior performance where extreme heat is encountered. Other brands of gaskets, labeled "high temperature" but not constructed of this superior material, may not withstand extreme heat.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

-Continued-

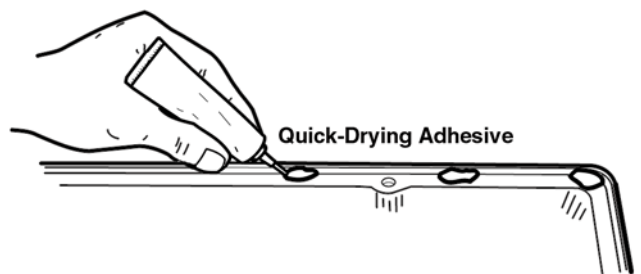

ATTACH AND ALIGN GASKET. Apply quick-drying adhesive, sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

REINSTALL COVER TO ENGINE. Torque securely to 90 in. lbs. Over-torquing can distort cover and cause leakage.

© 2001 Federal-Mogul Corporation
Form No. I-610 (Rev. 6/01)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

VALVE COVER GASKET

WHEN HIGH TEMPERATURE GASKET IS REQUIRED


The valve cover gasket in this set is constructed of a rubber coated, exceptionally heat resistant fiber.

It meets or exceeds OEM specifications for superior performance where extreme heat is encountered. Other brands of gaskets, labeled "high temperature" but not constructed of this superior material, may not withstand extreme heat.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

-Continued-

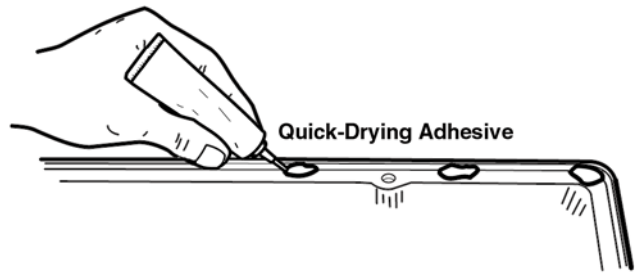

ATTACH AND ALIGN GASKET. Apply quick-drying adhesive, sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

REINSTALL COVER TO ENGINE. Torque securely to 90 in. lbs. Over-torquing can distort cover and cause leakage.

© 2001 Federal-Mogul Corporation
Form No. I-610 (Rev. 6/01)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

VALVE COVER GASKET

WHEN HIGH TEMPERATURE GASKET IS REQUIRED


The valve cover gasket in this set is constructed of a rubber coated, exceptionally heat resistant fiber.

It meets or exceeds OEM specifications for superior performance where extreme heat is encountered. Other brands of gaskets, labeled "high temperature" but not constructed of this superior material, may not withstand extreme heat.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

-Continued-

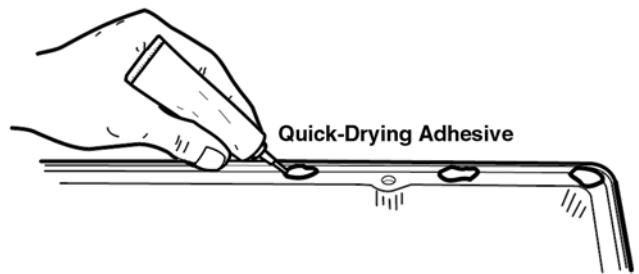

ATTACH AND ALIGN GASKET. Apply quick-drying adhesive, sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

REINSTALL COVER TO ENGINE. Torque securely to 90 in. lbs. Over-torquing can distort cover and cause leakage.

© 2001 Federal-Mogul Corporation
Form No. I-610 (Rev. 6/01)

Printed in U.S.A.